



LENS REMOVAL:


1. Hold the frame with the inside facing you in one hand and the lens change tool with the notch facing upwards in the other hand.

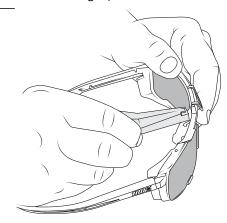

2. Slide the tool under the nose bridge, gently push forward to catch and release the tab that locks the lens latch onto the bottom inside of the nose bridge.

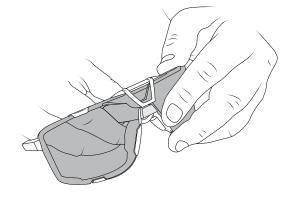


3. Open the latch completely.

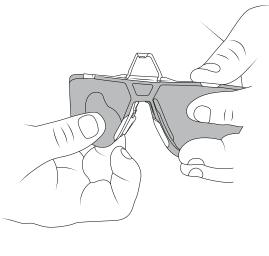


and nose bridge. 12/

4. Apply light pressure on the back of the lens while gently pulling the frame open to release the lens. First release the lens from the top

tabs, followed by the bottom tabs

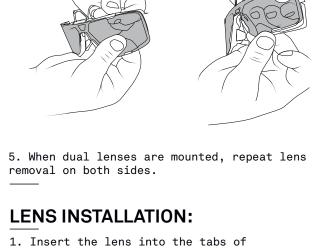

the nose bridge.

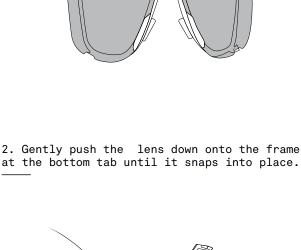



4. When installing dual lenses, repeat step 2

Accept no compromises, choose only quality sunglasses.

and 3 on both sides.