

# INSTRUCTION SHEET

## FOR UNIVERSAL SOLENOID APPLICATIONS

● NECESSARY PARTS IN PACKAGE

● OBSERVE TYPE OF INSTALLATION

**Figure 1**

Field coil connection: Use short hex head screw and lock washer. If old unit did not have (R) terminal, disregard.

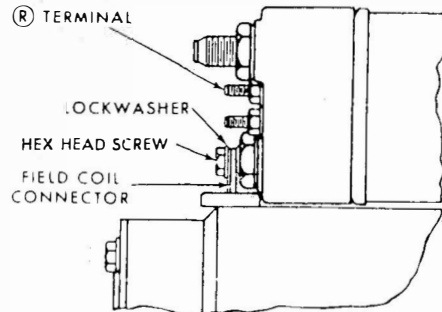


Figure 1

**NEVER REMOVE CAP OF SOLENOID OR LOOSEN TERMINAL MOUNTING NUTS  
MAKE CERTAIN TO INSTALL RETURN SPRING**

**\*\*The larger terminal connects to the battery\*\***

**Figure 2**

Field coil connection: Use long hex head screw, lock washer and copper tube as per illustration. If old unit did not have (R) terminal, disregard.

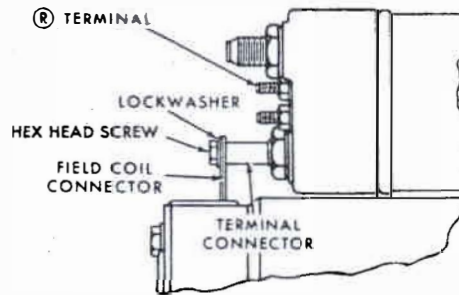


Figure 2

**Figure 3**

Field coil connection: Use short hex head screw, lock washer and plain washer. If old unit did not have (R) terminal, disregard.

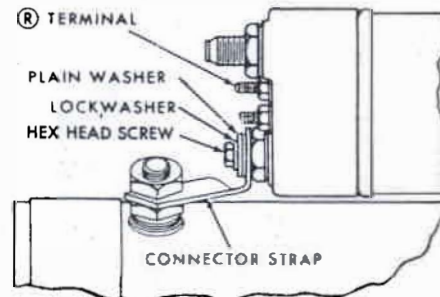


Figure 3

S-318

65000