

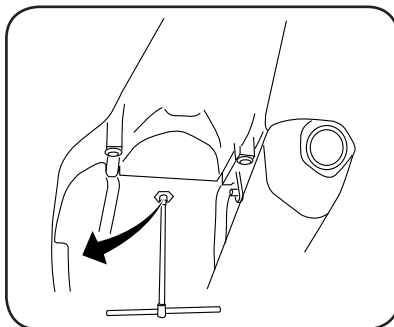



COD. 500002578 REV 1

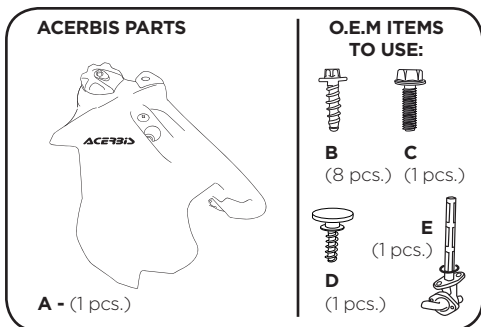


1. Remove the seat

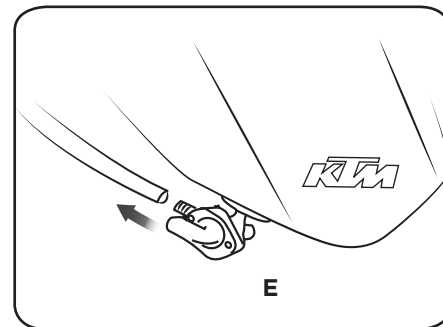


2. Remove the fuel line

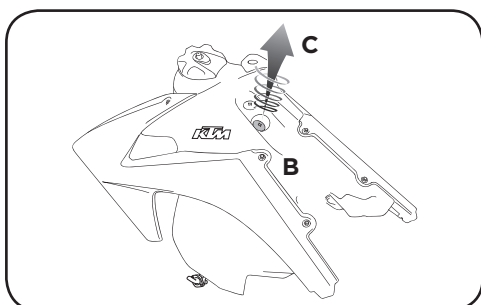


3. Unscrew the tank screw and remove the tank

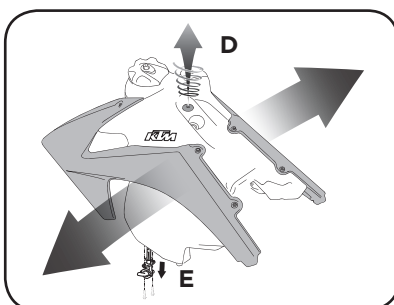


4. Remove the petcock, remove the radiator scoops, remove the seat screw

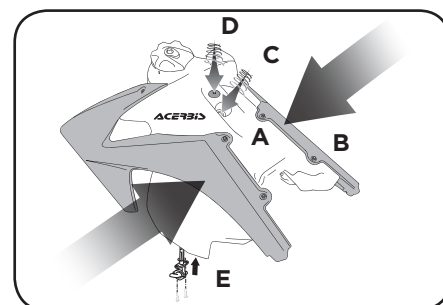

5. Place the acerbis tank. Install the petcock (torque spec: 1,8ft/lb 2,5N/m). Install the seat screw. Attach the radiator scoop. Install the tank screw

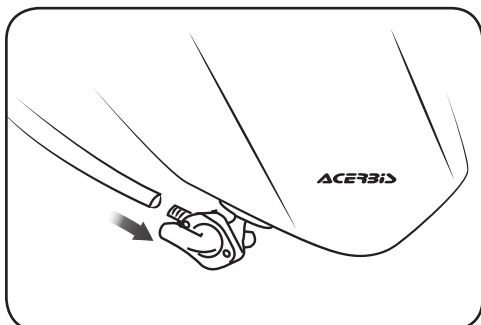

6. Attach the fuel line

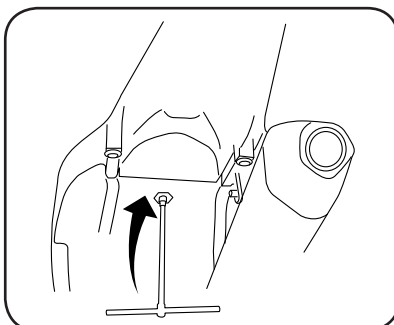

7. Install the seat

WARNING!

Clean tank interior thoroughly before installation. install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. do not start operate the vehicle if there are any fuel leaks! acerbis recommends that installation be done by licensed mechanic. read all instructions first before beginning installation.

DISCLAIMER:

DISCLAIMER: Due to uncontrolled variables in the manufacturing process of rotationally molded fuel tanks, the fuel tank may vary in size and shape by up 7% of the manufacturer's original listed capacity.