

2 a REMOVE THE TANK SCREW Ē RA Z **b** JDISCONNECT THE FUEL PUMP POWER CABLE





