

### KTM FUEL TANK SXF 15L SXF 250/350/450 EXCF 250/350/450/500

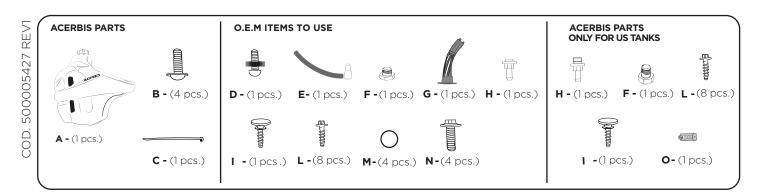




1 CO

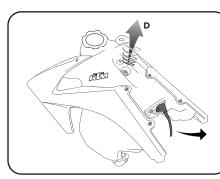


**1.** Remove the tank screws. Disconnect the fuel pump power cable.



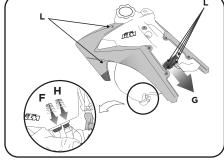


**3** Empty your fuel tank completely and remove the fasteners and the pump.

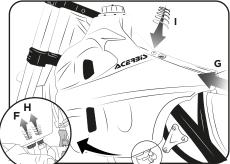


**4.** Arrange the tank on the bike, reconnect the pump, the fasteners and screw the seat screw.




5. Screw the tank screw.

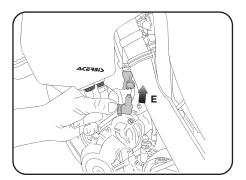


**6** Reconnect the fuel connector.

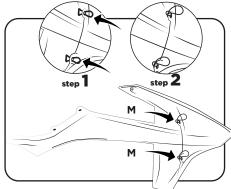

7. Fasten the O-rings to the radiator scoops, as shown.

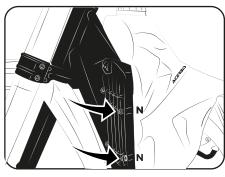


8. Tighten the screws N to the radiators.

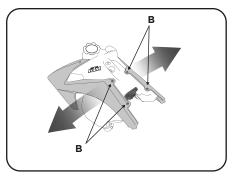

**9**. Remounting the radiator scoops with 4 screws B.

## KTM FUEL TANK SXF 15L '16


#### SXF 250/350/450 EXCF 250/350/450/500

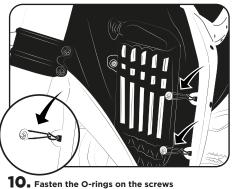

Q. Fasten the O-rings on the screws previously installed.

COD. 500005427 REV1

#### **ATTENTION: Pump hose mounting detail**

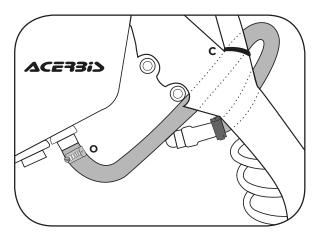

Fix the pump hose KTM as illustrated: use the Acerbis strap included make sure that the hose doesn't fold obstructing the fluid.



#### Thank you for purchasing an ACERBIS fuel tank

# WARNING

It is **EXTREMELY IMPORTANT** that the fuel tank be properly installed. To ensure proper installation, it is **STRONGLY RECOMMENDED** that the tank be installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injury or even death.

If self-installed NOTE THE FOLLOWING. Particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instruction first before beginning installation.

## DISCLAIMER

Due to uncontrolled variables in the manufacturing process of rotationally molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.