

## **Valve Stem Cores**

Inner portion of the valve stem which is often damaged or leaking. Cores are easy to replace with ALL44030 tool when replacing tires to assure a leak free valve stem. Universal design fits most standard valve stems.

 Part No.
 Quantity

 ALL99150......
 10-Pack

 ALL99150-100......
 100-Pack



REV051716