


**WIRING DIAGRAM**

1. Purple - Fuel level signal from sender
2. Brown - Used to program custom fuel level
3. X=Empty
4. White - 12 volt power for LED back lighting only
5. X=Empty
6. Red - 12 volt switched power
7. Black - Used to program custom fuel level
8. Black - Gauge ground
9. X=Empty
10. X=Empty

(viewed from the wire IN side of the plug)

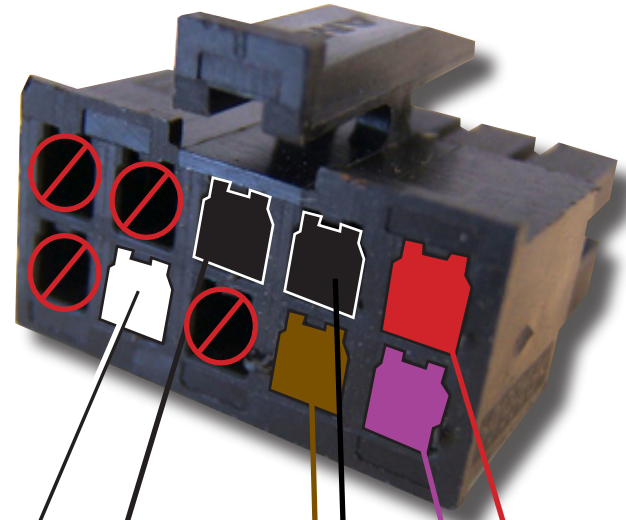

(viewed from the wire IN side of the plug)

