

Thanks for purchasing this BikeMaster product. At BikeMaster we strive to offer everything you need to maintain your bike and keep it running at peak performance. We appreciate your business!

Part Number/s: 266282

### Contents: Quantity:

Grips L/R	1ea
Heater Switch	1
Wiring Harness (w/fuse)	1
Handlebar Bracket	1
hook and loop fastener Pad	1
Glue	1
Midway Connector	1
M3x25L Screw	1
M3 Nut	1
Bar End Caps	2

#### Installation:

STEP 1: Attach heater switch to handlebar bracket using hook and loop fastener pad. (Figure 1)

STEP 2: Attach handlebar bracket to handlebars and after positioning in appropriate position tighten securely.

Step 3: Wire heater control to a keyed ignition source.

## **Setting Heat Modes:**

Voltage Screen - will show you the current voltage of your battery. Hold button down to enter the Low Voltage screen. You can choose the setting between 10-13v. This will turn your grips off if the battery drops below the voltage you've set. (Figure 2)

Quick Heat Up Timing Screen – Hold button for 3 sec to enter time 1-20 minutes. This will turn the Quick Heat up off after designated time and return your grips to normal setting. (Figure 3)

Quick Heat Up Level Screen - Hold button for 3 sec to enter level. 3-5, low to max (Figure 4)

Return to Normal – Hold button for 3 sec to go back to normal screen (Figure 5)

# **BikeMaster**

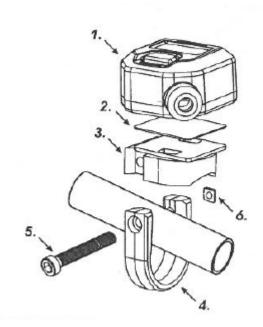


Figure 1



Figure 2



Figure 3

# **BikeMaster**



Figure 4



Figure 5



When key is on, the panel will show current voltage:



In volt meter screen, press the button once to enter the quick heat up mode:





In quick heat up mode, press the button once. From here choose the level desired:

**ATTENTION!** It is the installer's responsibility to ensure that all the fasteners (including pre-assembled) are tightened before operation of the motorcycle.

Periodic maintenance may be required.

Additional Information:	
Specs:	
Color:	
Weight:	
Dimensions:	