

This Honda Motorcycle Manual is 360 pages.

QUICK REFERENCE DATA

CHAPTER ONE / GENERAL INFORMATION

Manual organization / Notes, cautions and warning / Service hints / Torque specifications / Safety first / Special tips / Expendable supplies / Parts replacement / Serial numbers / Tune-up and troubleshooting tools

CHAPTER TWO / TROUBLESHOOTING

Operating requirements / Emergency troubleshooting / Engine starting / Engine performance / Engine noises / Excessive vibrations / Front suspension and steering / Brakes

CHAPTER THREE / LUBRICATION, MAINTENANCE AND TUNE-UP

Routine checks / Pre-checks / Service intervals / Tires and wheels / Crankcase breather hose (U.S. models only) / Evaporation emission control (1984-on California models only) / Secondary air supply system (1986-on California models only) / Battery / Periodic lubrication / Engine oil and filter change / Final drive oil change / Control cable lubrication / Periodic maintenance / Air filter / Fuel filter / Coolant system check / Coolant change / Steering head adjustment / Tune-Up / Compression check / Spark plugs / Ignition timing / Carburetor synchronization / Idle speed adjustment / Specifications

CHAPTER FOUR / ENGINE

Engine principles / Hydraulic valve adjuster system / Servicing engine in frame / Engine removal installation / Cylinder head cover and camshaft / Cylinder heads / Valves and valve components / Rocker arm assemblies / Hydraulic tappet / Cylinder / Piston pin and piston rings / Oil pump drive sprockets and drive chain / Oil pump / Oil pressure relief valve / Primary drive gear / Crankcase and crankshaft / Connecting rods / Output gear unit / Alternator rotor, starter, clutch assembly and gears / Break-in procedure / Specifications

CHAPTER FIVE / CLUTCH AND TRANSMISSION

Clutch / Clutch hydraulic system / Clutch master cylinder / Slave cylinder / Bleeding the clutch / External shift mechanism / Transmission / Internal shift mechanism / Specifications

CHAPTER SIX / FUEL, EMISSION CONTROL AND EXHAUST SYSTEMS

Carburetor / Carburetor service / Carburetor adjustments / Throttle cable replacement / Choke cable replacement / Fuel shutoff valve / Fuel filter / Fuel pump / Main fuel tank / Secondary fuel tank / Crankcase breather system / Evaporative emission control system / Secondary air supply system / Exhaust system / Specifications

CHAPTER SEVEN / ELECTRICAL SYSTEM

Charging system / Alternator / Voltage regulator/rectifier / Ignition system / Spark unit / Ignition coil / Pulse generator / Starting system / Starter / Starter solenoid / Clutch diode / Lighting system / Switches / Electrical components / Specifications

CHAPTER EIGHT / COOLING SYSTEM

Cooling system check / Radiator / Cooling fan / Thermostat / Water pump / Coolant pipes / Hoses / Specifications

CHAPTER NINE / FRONT SUSPENSION AND STEERING

Front wheel / Front hub / Wheel balance / Tire changing / Tire repairs / Handlebar / Steering head

and stem / Steering head bearing races / Front fork / Specifications

CHAPTER TEN / REAR SUSPENSION AND FINAL DRIVE

Rear wheel / Rear hub / Final drive unit and drive shaft / Universal joint / Swing arm / Shock absorbers / Specifications

CHAPTER ELEVEN / BRAKES

Front disc brakes / Front master cylinder / Front brake pad replacement / Front caliper / Front brake hose replacement / Front brake disc / Bleeding the system / Rear drum brake / Rear brake pedal / Specifications

CHAPTER TWELVE / FRAME

Kickstand sidestand / Centerstand / Footpegs / Seats / Rear fender / Frame / Specifications

INDEX

WIRING DIAGRAMS

Models covered:

1984 1985 1986 1987 Honda VT700C Shadow

1983 Honda VT750C Shadow

VT700

VT750

VT 700 750 700C 750C

Clymer Manuals Honda VT700C Shadow Manual

Clymer Manuals Honda VT750C Shadow Manual