

## **CYCLE ELECTRIC INC**

# Installation Instructions CE-8188

### **22 Amp Stator**

The CE-8188 will fit all big twins 1970-98

These are generalized instructions and are not intended to be all-inclusive. For more detail on your model see service manual.

#### **Stator Removal**

- 1) Disconnect negative battery terminal.
- 2) Drain primary case oil on wet clutch models.
- 3) Remove outer primary cover.
- 4) Consult appropriate service manual and remove compensator sprocket.

Note: After several thousand miles it may be possible to remove the compensator sprocket and chain adjustor shoe without removing the clutch. Caution: Do not put excessive side force on chain.

- 5) Remove output shaft extension. Take note of all shims and spaces between output shaft extension and rotor.
- 6) Remove rotor and all spacers under rotor.

Note: It may be necessary to remove the inner primary on earlier models.

- 7) Unplug regulator from stator
- 8) Remove 4 stator mounting screws. Remove 2 stator plug clamp screws. Remove stators.

#### **Stator Installation**

- 1) Install stator plug and plug clamp in case. Use lock-tight 222 purple on clamp screws.
- 2) Mount stator to engine case with new mounting screws (supplied). Screws have thread-locking compound already applied. Torque screws to 30-40 in-lbs.

#### **Rotor Installation**

- 1- Install small diameter .095" shim on output shaft before rotor.
- 2- Install rotor on output shaft.
- 3-1970-1990 Place large 2.81" O.D. x .219" thick shim on output shaft after rotor.
- 1991-later FLT and FXR use a .249 thick shim on output shaft after rotor.
- 1991-later Softtail and Dyna models no spacer washers are used on out side of rotor.
- 4- All models-add necessary variable thickness shims to achieve proper primary chain alignment.
- 5- Install inner primary if removed.
- 6- Install compensator sprocket with chain adjuster shoe, and clutch if removed.

- 7- Adjust primary chain.
- 8- Check primary chain alignment.
- 9- Install outer primary and other parts removed.
- 9) Connect regulator plug to stator, on rubber mount models keep wires away from front motor mount. It moves and can damage wires.

Note: Don't forget to add oil on wet clutch models.

# **Have A Good Ride!!**