



Driven Racing Oil Fill Plug

Part#:Generic

INSTALLATION INSTRUCTIONS

1. Remove OEM oil fill plug.
2. If the Driven oil plug doesn't come with an o-ring re-use the OEM o-ring.
3. Apply small amount of grease on o-ring.
4. Install oil fill plug with OEM/Driven o-ring and hand tight.
(Max 8 FT/lbs)

NOTE: *Run engine and make sure there are no leaks prior to riding.

METAL THAT MOVES YOU