

4-Stroke Header Installation Instructions

Thank you for choosing FMF as your performance aftermarket exhaust. We have spent countless hours of R&D and testing to ensure you receive the highest quality product on the market today.

All FMF products are developed using the most current technology available for design and manufacturing. Every exhaust is made 100% at the Flying Machine Factory in Southern California. We use only the highest quality American materials for function and durability.

Since 1973, FMF has been bringing you the very best in bolt on performance. Our products are specifically engineered to broaden your existing powerband and give you an all around power increase with substantial weight savings. Bolt on FMF and *FEEL THE POWER*!

Attention

This product is designed for closed course use only unless otherwise stated and not intended to meet emission regulations for use on public lands, roads or access routes – consult with local jurisdictions.

Please read all instructions thoroughly before installation. Failure to follow all installation instructions will void any warranty implied or otherwise. FMF Racing is not responsible for problems due to improper installation and/or improper use.

Before you begin installing this product, we recommend wearing safety glasses and mechanics gloves. You must know how to remove and replace your stock exhaust in order to install this FMF product otherwise have it installed by a professional mechanic. Keep all stock parts from your existing system as some components may be necessary to install your new FMF exhaust depending on the application.

Parts Supplied		Tools Required
(1) FMF Header (2) spring	041344-45, 041430, 041459-60 980025	12mm wrench spring puller contact cleaner High Temp silicone

Removal and Pre-Installation

- 1. Make sure engine is completely cool prior to installation and the vehicle is in stable position.
- 2. Remove the muffler (see instructions for removing muffler or refer to your service manual).
- 3. Remove the nuts attaching the stock header to the exhaust port and save to mount the FMF header.
- 4. Gently remove the header. Keep the existing exhaust port gasket as it will be reused if in good condition (minimal cracks, no tears) otherwise replace with a new gasket.
- 5. Using contact cleaner, clean the exhaust port where the header connects. Allow to dry then lightly coat with a bead of high temp silicone for an improved seal.

Installation

- 6. Align the front section of the FMF header into position inside the exhaust port and secure using the stock nuts removed in step #3. Do not tighten at this time. Wipe off any excess silicone.
- 7. Using contact cleaner, clean the slip-fit section of the front header where it connects to the rear header. Allow to dry then lightly coat with a bead of high temp silicone for an improved seal.
- 8. Install the rear section of the FMF header onto the front section. Using a spring puller, install the two (2) supplied springs to connect the header sections together. Wipe off any excess silicone.
- 9. Using contact cleaner, clean the slip-fit section of the header where the muffler midpipe connects. Allow to dry then lightly coat with a bead of high temp silicone for an improved seal.
- 10. Install the muffler at this time, using the instructions provided, but do not fully tighten mounting hardware.
- 11. Make sure the header and muffler are in neutral positions and not binding. Slowly tighten all mounting fasteners and clamps to manufacturer's specifications, starting at the header and working back to the muffler.
- 12. Inspect the complete exhaust to make sure there is no contact with the frame, shock spring, engine, body panels, or any cables, hoses, or wiring. The exhaust system should only be in contact with the exhaust port and mounting points. Confirm all controls operate in accordance with the manufacturer's specifications.
- 13. We recommend using high temp silicone for an improved seal. Please follow instructions for the silicone and allow sufficient time to dry before starting the engine.
- 14. Start the engine and bring it up to operating temperature. Check for exhaust leaks.
- 15. Let engine cool completely and torque all mounting hardware to manufacturer's specifications.

DISCLAIMER: All products manufactured and/or distributed by FMF Racing are a) intended for use on stock vehicles specific to the U.S. market; b) for closed course use only unless otherwise stated and c) not intended to meet emission regulations for use on public lands, roads or access routes – consult with local jurisdictions. FMF Racing makes no claims as to the products applicability, effectiveness or fitment on modified machines. FMF Racing is the sole determines of abuse, misuse, installation errors and modifications. We assume no liability for any errors in listings, specifications, part numbers, prices or model applications. We reserve the right to change specifications, product descriptions, product quality, pricing and application at any time without notice and without further obligation. Buyer assumes all risk for any and all damage caused to themselves, a third party and/or property by virtue of failure of these products. By installing and/or using an FMF product, you hereby accept and understand these stated terms and conditions and have followed all instructional steps.