

# GET PERFORMANCE CENTER: Quick Guide

## 🇬🇧 INSTALLING GET PERFORMANCE CENTER SOFTWARE

 	<ul style="list-style-type: none"> <li>Supported Operative Systems: Windows XP SP3 or greater</li> </ul>
	<ul style="list-style-type: none"> <li>CPU: Intel P4 2GHz or greater</li> </ul>
	<ul style="list-style-type: none"> <li>RAM: 256MB or greater</li> </ul>
	<ul style="list-style-type: none"> <li>Minimum hard disk space: 20 MB</li> </ul>
	<ul style="list-style-type: none"> <li>USB specifications: USB 2.0</li> </ul>
<ul style="list-style-type: none"> <li>Minimum display resolution : 1024x748</li> </ul>	






	<ol style="list-style-type: none"> <li>1 Download the <b>GET Performance Center</b> installation file into your PC.</li> </ol>
	<ol style="list-style-type: none"> <li>2 After the download open the folder where the installation file is stored (it depends from the internet browser settings – normally is the <b>Download</b> folder in Windows <b>Documents</b>). Click twice on program to run the installation.</li> </ol>
	<ol style="list-style-type: none"> <li>3 Confirm the requests made by the software and wait until the installation is finished.</li> </ol>
	<ol style="list-style-type: none"> <li>4 At the end of operation the <b>GET Performance Center</b> icon will be added in your PC desktop.</li> </ol>

## 🇬🇧 DOWNLOADING THE GET POWER ECU MAPS






	<ol style="list-style-type: none"> <li>1 Run <b>GET Performance Center</b> software by clicking on its desktop icon.</li> </ol>
	<ol style="list-style-type: none"> <li>2 Click on "<b>Download and/or buy maps</b>" button.</li> </ol>
	<ol style="list-style-type: none"> <li>3 Sign in map download area by putting Username and Password or create a new account (it is necessary only at first access).</li> </ol>
	<ol style="list-style-type: none"> <li>4 Insert the ECU code and download the map.</li> </ol>

**CONNECTING THE GET POWER ECU TO A PC (ECU FITTED ON THE BIKE)**

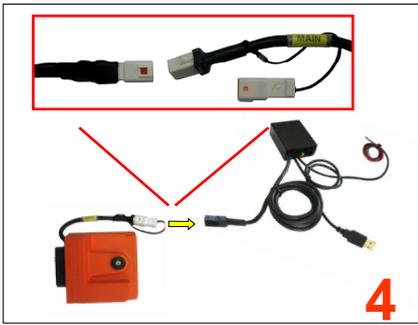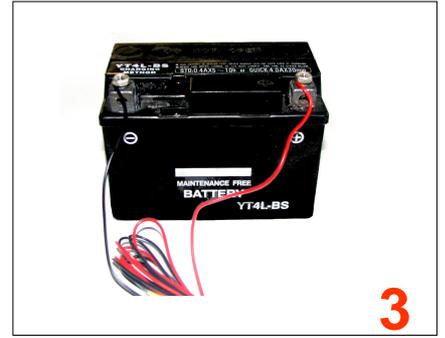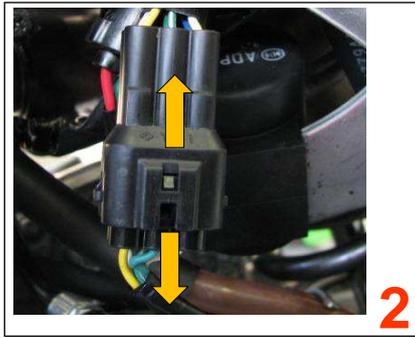

- |  |  |
|--|--|
|  | 1 Remove (if presents) all USB – to – serial converter devices and stop all running software from the PC.                                    |
|  | 2 Disconnect the fuel pump power supply (normally the electric loom leading to the fuel tank)  |
|  | 3 Connect a <b>fully charged</b> battery (12V) to <b>GET Power PC Interface</b> : red wire to positive pole and black wire to negative pole. |
|  | 4 Connect the <b>GET Power PC interface</b> to <b>MAIN</b> connector of <b>GET POWER</b> ECU.  |
|  | 5 Connect the <b>GET Power PC interface</b> to a free USB port of <b>PC</b> .  |
|  | 6 The red led of <b>GET Power PC interface</b> will flash for a few seconds, thereafter it will remain on.                                   |


**UPLOAD A MAP TO THE GET POWER ECU**

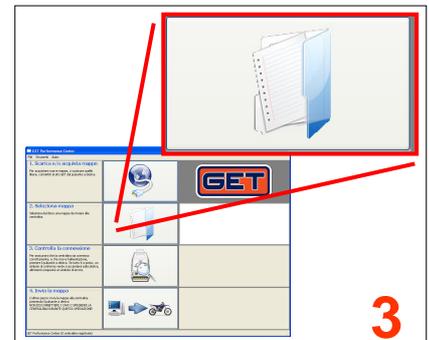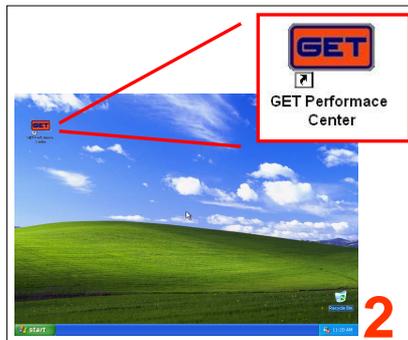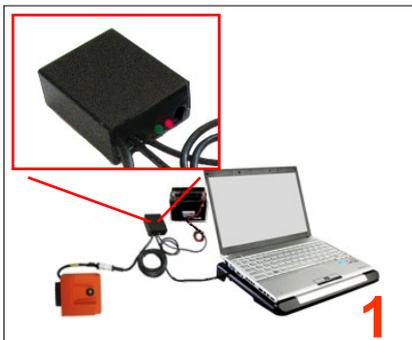

- |  |   |
|--|---|
|  | 1 Connect the <b>GET Power PC interface</b> cable both to the <b>PC</b> and to the <b>GET POWER</b> ECU (see previous chapter). |
|  | 2 Run the <b>GET Performance Center</b> software.   |
|  | 3 Load the new map by clicking on <b>"Select Map"</b> button.   |
|  | <b>Continued on next page ....</b>  |



4

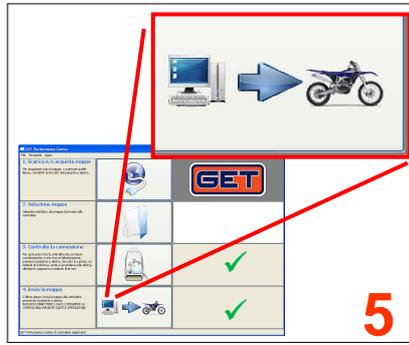


5




6

.... Continued from preceding page	
	4 Check the ECU link by clicking on button “Check ECU connection” of GET Performance Center software.
	5 Click on “ Send map” button and wait until the end of the programming operations (if things go wrong please check the charge state of battery and all connections – after that start the automatic restore procedure following the software instruction).
	6 Unplug the GET Power PC interface, plug in the fuel pump connector and start the engine.

 **RESTORING THE GET POWER ECU (IN CASE THE ECU DOESN'T WORK)**

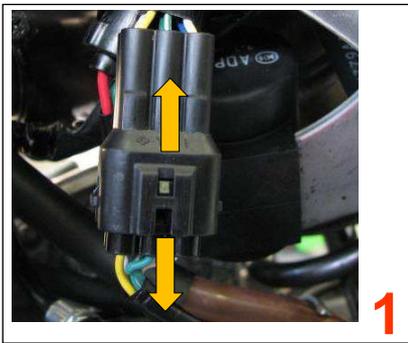


1

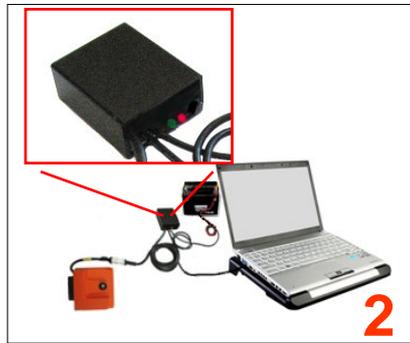


2



3

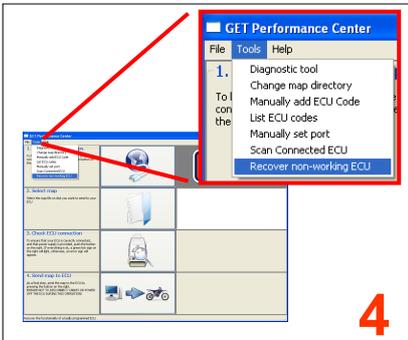

4

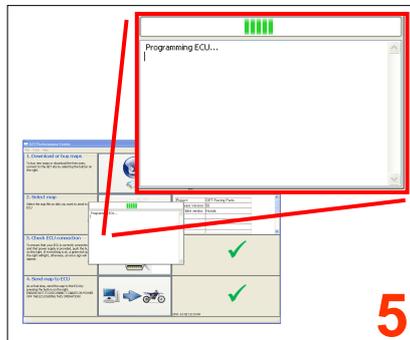

5

	1 Disconnect the fuel pump power supply (normally the electric loom leading to the fuel tank)
	2 Connect the ECU to the PC and run the GET Performance Center software (see previous pages)
	3 Load the ECU map by clicking on “Select Map” button
	4 Click on Tools – Recover non-working ECU
	5 Wait until the end of restore operation

 **FAQs (FREQUENTLY ASKED QUESTIONS)**

	I'm not to be able to program and/or connect my ECU	<ul style="list-style-type: none"> <li>• Ensure the connection of GET Power PC interface</li> <li>• Invalid GET POWER map (wrong unlock code)</li> <li>• Previous programming has gone wrong – try restoring the ECU</li> </ul>
	I'm not to be able to find the downloaded map in my PC	<ul style="list-style-type: none"> <li>• Check your WEB browser download preferences</li> </ul>
	I need to restore my ECU	<ul style="list-style-type: none"> <li>• See the restore procedure or GET Performance Center manual</li> </ul>