

# **Deluxe Passenger Controller**

**For All Honda GL1800 or GL1500**

**#PSCR-GL1800  
or #PSCR-GL1500**

**Installation  
and Operation  
Instructions**

## Installation Instructions

1. Remove seat.

2. Unplug the existing passenger headset connection cable pigtail from the 6-pin plastic plug located under the seat and connect in its place, the corresponding 6-pin red plastic plug from the 'J&M Passenger Controller. **(Figure A)**

3. Reconnect the existing passenger headset pigtail to the corresponding 6-pin red plug on the J&M passenger controller.

4. To connect the CB PTT switch from the controller to the **GL-1800** wiring harness, locate the open black 2-pin female connector, normally positioned just forward of the crossbar, under the seat. Plug the 2-pin black connector from the passenger controller into this plug. (the 6-pin brown plug on the controller will NOT be used for the GL-1800 connection).

5. To connect the CB PTT switch from the controller to the **GL-1500** wiring harness, locate the open brown 6-pin female connector, normally positioned just forward of the crossbar, under the seat. Plug the

6-pin brown connector from the passenger controller into this plug. (the 2-pin black plug on the controller will NOT be used for the GL-1500 connection)


6. Connect the black negative lead from the power harness of the passenger controller to the frame on both the GL-1800 and GL-1500.

7. Connect the red positive lead to the positive accessory terminal behind the left side cover on both the GL-1800 and GL-1500.


8. Move the controller module to an area just above right saddlebag.


9. Re-install the seat and install the passenger controller on the right inside grab-handle using the mounting plate and hook and loop fastener strap provided. **(Figure B)**

**Fig. A**

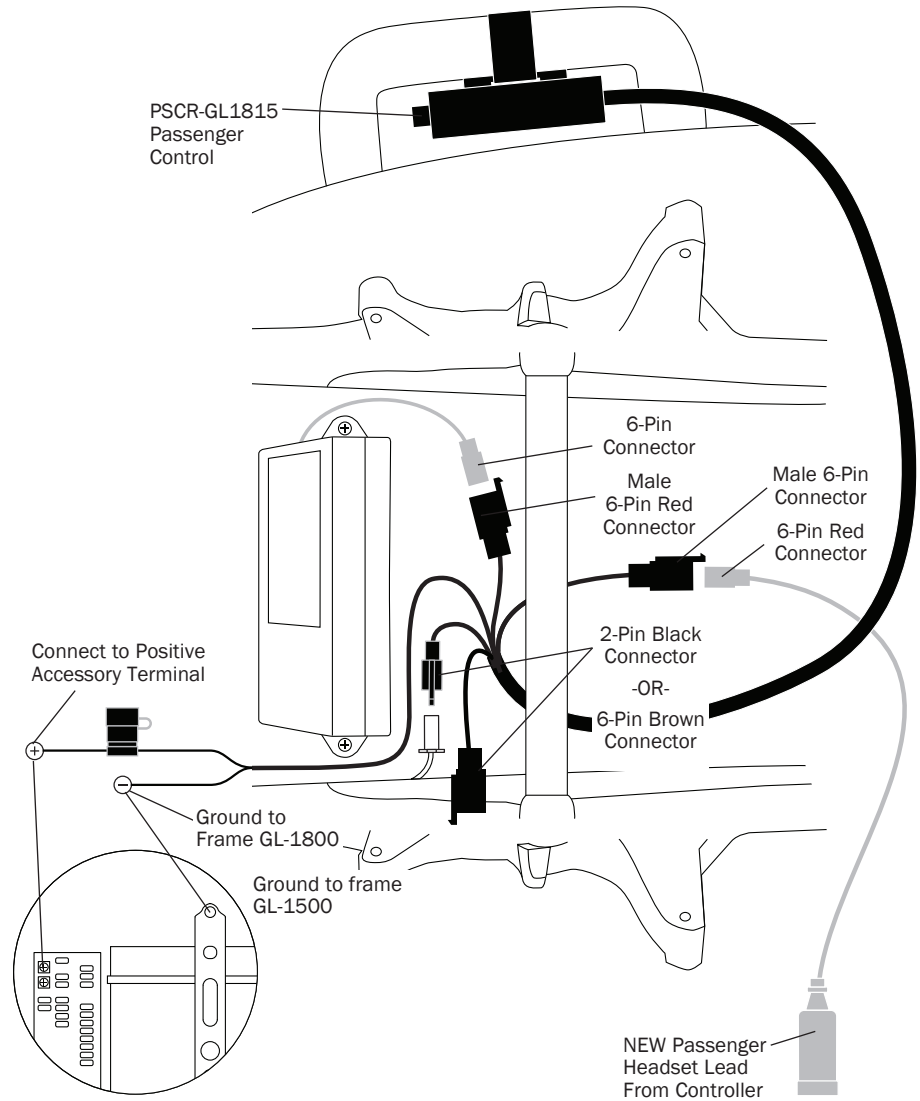

**Fig. B**

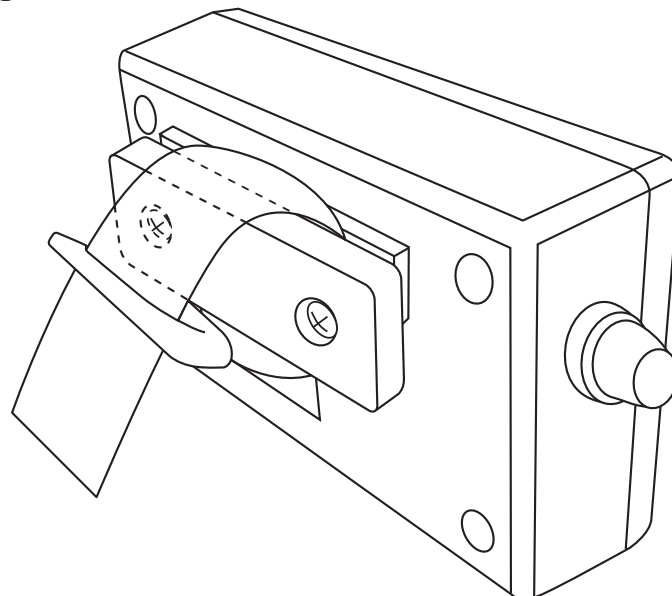

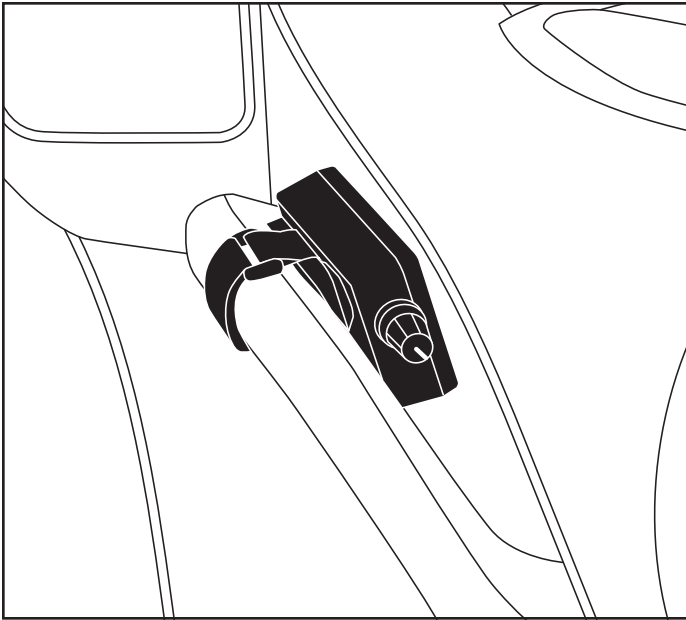


## Operation

**Volume Control:** To increase the helmet headset volume, rotate the control knob clockwise and to decrease, rotate counter-clockwise. Please note that this volume control will affect all audio features, including the intercom. Therefore, if you rotate the control to a very low volume you may not be able to hear the driver over the intercom portion of the system. Additionally, this control can only raise the helmet audio level to the maximum level of the main system which is set by the driver.

**CB Transmit Button:** The CB PTT transmit button allows for passenger initiated CB transmission, if your Gold Wing is so equipped. Depress and hold down on the PTT button for the duration of the CB transmission.

**Passenger Microphone Interrupt Switch:** Depress this switch to the forward (ON) position to activate the passenger's microphone and to the rear (OFF) position to turn off the passenger's headset microphone.

**NOTE:** It is not necessary to return the passenger microphone interrupt switch to the ON position before you transmit on the CB. The passenger CB transmit button will initiate CB transmission with the passenger microphone interrupt switch in either the ON or OFF position.

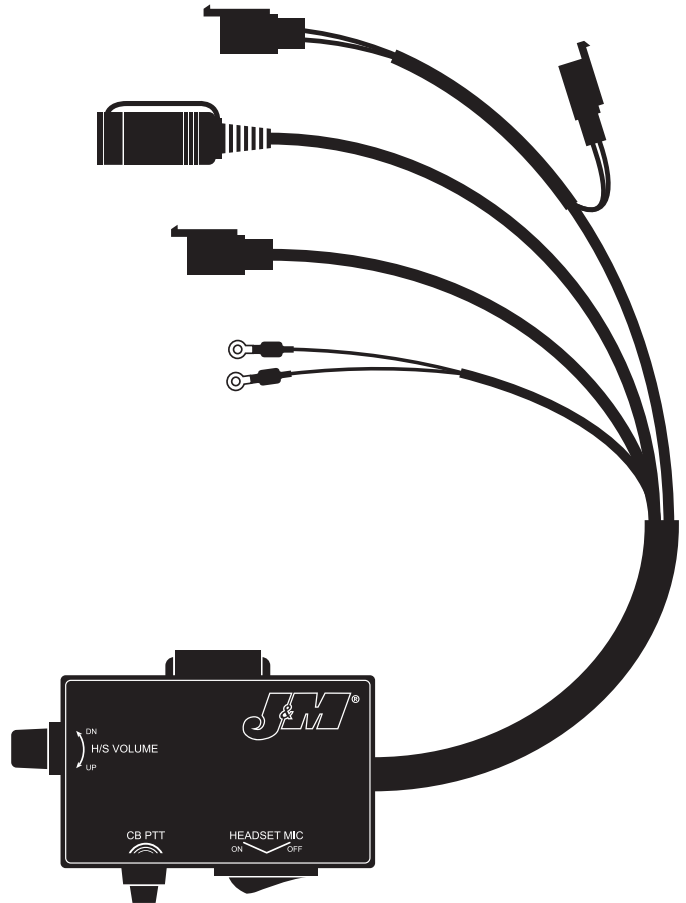

---

Thank you for the confidence you have shown in J&M Corporation by purchasing one of our innovative products.

