

**KICKER®**

---

**PS**

*Coaxial Speakers*

PS42 | PS44

**PERFORMANCE**

Woofer Size   in [mm]	4 [100]
Tweeter Size   in [mm]	3/4 [20]
Frequency Response   Hz	100–20,000
Max Recommended Amplifier Power [Watts]   PEAK/RMS	100/50
Sensitivity [SPLo]   dB @ 1W, 1m	85.756
Nominal Impedance [Zn]   ohm	2Ω (40PS42), 4Ω (40PS44)
Weight   oz [g]	11.9 [338]
Mounting Hole Diameter   in [mm]	3 5/8 [93]
Mounting Depth   in [mm]	1 11/16 [43]
Top Mount Height   in [mm]	3/4 [19]

**Package Contents:**

- |   |                            |
|---|----------------------------|
| (2) PS4 Speakers                          | (2) 12" wiring harnesses   |
| (8) M4 x 25mm pan cross head woodscrews   | (8) M4 speed nuts          |
| (4) 22ga, red crimp-style butt connectors | (2) 4" to 5" Adapter plate |
| (2) Grilles                               | (2) Kicker badges          |

**INSTALLATION**

 
Please refer to your bike's factory service manual for disassembly/installation information. Typically, you should retain all factory screws, hardware, and grilles when upgrading your bike to a KICKER system. The KICKER PS4 is compatible with factory locations and 4" or 5" (with adapter plate) audio systems. If you are doing a custom installation, be careful not to drill into wiring or vehicle mechanisms. You are solely responsible for securely mounting the speakers. Use the included grilles after performing a custom installation.

**1. Remove your bike's instrument panel per manufacturer's service manual.**

**2. Remove factory speakers.**

Remove the screws securing the factory speakers.

Remove the speaker connectors while removing the factory speaker.

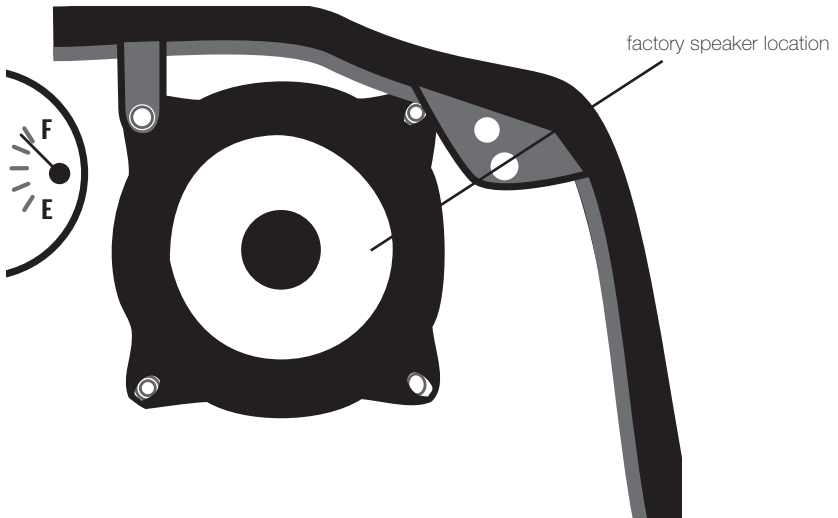

**3. Install PS4 in factory location.**

Connect the factory speaker connectors to the PS4 terminals.

Mount the PS4 to the desired location and secure using the 25mm screws and nuts. Use the adapter plate if you're installing the PS4 in place of a 5" speaker.

Re-install your bike's access panel in the reverse order you disassembled it.

