


3

Wiring: Attach the included wiring to your source unit or amplifier. If you require more length, splice the exposed wiring from the insulated cable to your source unit or amplifier using 18 gauge wire. KICKER recommends protecting the splice with heat shrink tubing. Attach the **Rear Badge** over the **M5x40 Screw**.
Screw.

KICKER® PSM3

Weather-proof Mini System

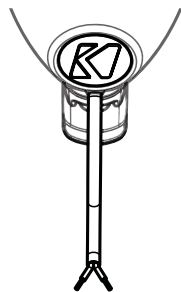

Frost Clear: Negative

Frost Blue - Positive

Specifications

Woofers [in, mm]	3, 75
Frequency Response [Hz]	100 - 15,000
Power Handling [PEAK/RMS]	100/50
Sensitivity [1W, 1m]	85 dB
Nominal Impedance [Ω]	2 or 4
Weight [oz., g]	20, 570
Height [in, mm]	4-3/4, 120
Width [in, mm]	3-3/8, 86
Depth [in, mm]	3-7/8, 98
Fits Handle Bar Sizes [in,mm]	1-1/4, 32 1, 25 7/8, 22

Contains:

- (2) PSM Speaker
- (2) PSM Enclosure
- (2) Upper Clamp
- (2) Lower Clamp
- (2) Speaker Mount
- O-Ring
- (2) M5 O-Ring
- (2) Washer
- (2) M5x40 Screw
- (2) M8x20 Screw
- (4) M5x16 Screw
- (2) Rear Badge
- (4) Small Adapter
- (4) Large Adapter

1 Enclosure Mounting: Remove the **M5x16 Screws** and **Lower Clamp** using a 4mm hex key, then position the **Upper Clamp** along the bar you wish to mount the enclosure to. Use the **Large & Small Adapters** for smaller bar-mounting applications. Attach the **Lower Clamp** to the **Upper Clamp** with the **M5x16 Screws** using a 4mm hex key.

2 Speaker Orientation: Slightly loosen the **M8X20 Screw** using a 6mm hex key and the **M5x40 Screw** using a 4mm hex key. Aim the speaker enclosure at the listener's head and orient the logo as desired. Do not rotate the speaker too far ($\pm 45^\circ$) and damage the internal wiring. Retighten the screws.

