



INSTALLATION INSTRUCTIONS

Part Number AL-1004

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last one million miles or more. This filter can be used in a stock machine, with no modifications required. However if any engine modifications have been made, tuning/jetting adjustments may be required. However, there are special installation instructions, so please follow the procedures outlined below to ensure that the K&N Air Filter seals properly.

INSTALLATION:

1. Remove the stock [air filter](#).
2. Carefully clean all of the sealing surfaces in the air box.
3. Apply the provided K&N Sealing Grease inside the groove on the backside of the K&N Air Filter. (Fig. 1)
4. Install the K&N Air Filter into the air box base. (Fig. 2)
5. Reinstall the stock air filter frame.
6. Reinstall the air box lid and tighten the screws.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

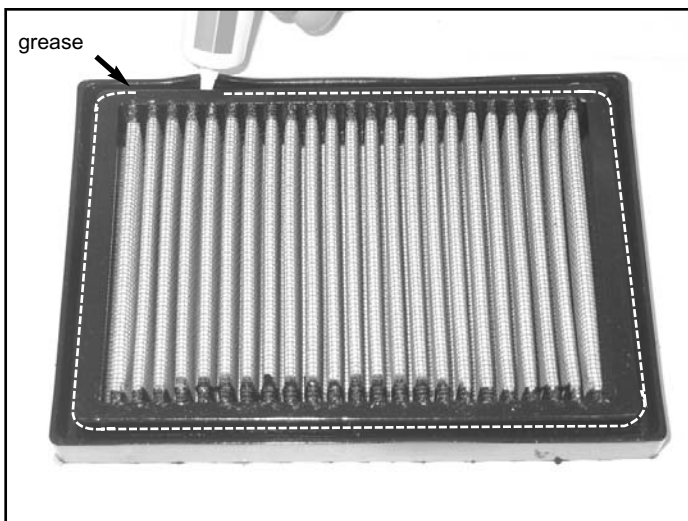


Fig. 1

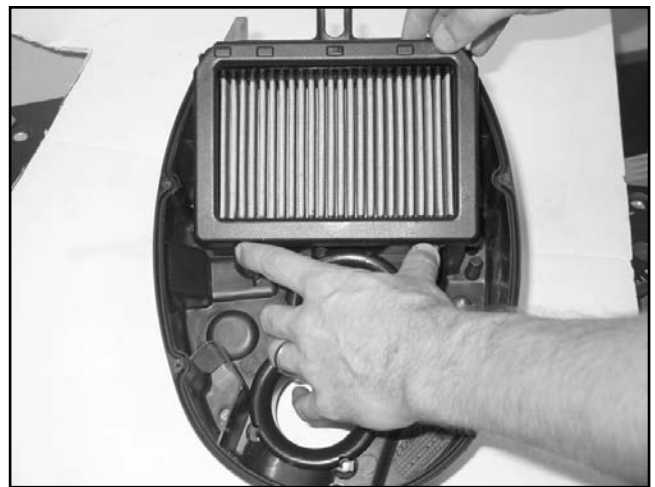


Fig. 2