



# INSTALLATION INSTRUCTIONS

## Part Number HD-4915

Congratulations, you have purchased the finest [air filter](#) that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

### INSTALLATION

1. Remove the screw securing the air box assembly lid. Fig. 1
2. Remove 2 nuts securing the bracket to the stock air filter plate, remove the stock air filter. Fig. 2
3. Remove the rubber gasket from around the stock air filter.

**NOTE: This will be reused with the installation of the K&N® air filter. Fig. 3**

4. Using a damp cloth, clean any dirt or debris from the air box assembly.
5. Install the K&N® air filter with the gasket installed around outer edge of filter from step 3. Fig. 4
6. Reinstall the 2 nuts to secure the air filter to the backing plate.
7. Reinstall the air box assembly lid using the screw removed in step 1.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**



Fig. 1

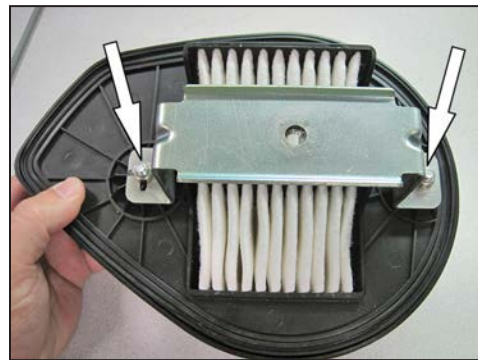


Fig. 2



Fig. 3



Fig. 4