



INSTALLATION INSTRUCTIONS

PART NUMBER: KA-2008

Congratulations, you have purchased the finest [air filter](#) that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

INSTALLATION:

1. Remove the four air cleaner cover screws and remove the cover.
2. Remove the air filter screw and remove the stock air filter.
3. Remove the o-ring from the stock air filter and install into the groove of the K&N® air filter.
4. Install the four provided spacers into the K&N® air filter. (Fig. 1)
5. Install the provided captive screw into the K&N® air filter. (Fig. 2)
6. Using the supplied sealing grease, apply a bead of grease onto airbox in the o-ring groove.(Fig.3) Grease should be placed in the o-ring groove on the perimeter of the airbox. (Fig.4)
6. Install the K&N® air filter into the airbox and tighten the captive screw.
7. Reinstall the air cleaner cover.
8. Reinstall the four air cleaner cover screws and tighten.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS RVCED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 2



Fig. 3



Fig. 4