

Installation Instruction

1. Remove the airbox lid retaining system
2. Take off the lid and carefully remove the original filter.
3. Blank off the carburettor intakes to ensure nothing falls into the engine.
4. Clean the inside of the airbox .
5. Remove the blanking material from the carburettor intakes.
6. Install the K&N [air filter](#) in the airbox; the gasket should fit downwards to the engine.
7. Replace the lid retaining system and tighten to the required torque.

FILTER MAINTENANCE: K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the recharger service kit ([99-5000EU](#)).

