



# INSTALLATION INSTRUCTIONS

## Part Number: TB-1213

Congratulations, you have purchased the finest [air filter](#) that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

### INSTALLATION:

1. Remove the stock air filter.
2. Clean all sealing surfaces in the air box including any necessary areas around the air-box ensuring you start as clean as possible.
3. Use the supplied K&N® sealing grease on the seal of the filter.
  - a) Remove the top of the sealing grease and cut the tip off (use snips) just past the threads. This will allow the tube to lay a sufficient bead of grease onto the filter.
  - b) Hold the OE filter tray with the K&N filter placed in it and then apply an even bead of grease along the lip seal around the perimeter of the filter. (Fig. 1) & (Fig.2)
4. Install the tray & K&N® air filter into the air box, ensuring the screws are completely tightened into the air box

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**

Fig.1



Fig.2

