

Congratulations, you have purchased the finest <u>air filter</u> that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N Air Filter seals properly.

INSTALLATION

- 1. Remove the stock air filter.
- 2. Install the K&N Air Filter.
 - **Note:** Locate the grooves in the air box (Fig. 1) and hold the K&N Air Filter at an angle to line up the tabs on the air filter with the grooves in the air box. (Fig. 2)
- 3. Once the tabs are located in the grooves of the air box gently lower the K&N Air Filter into the sealing grooves. (Fig. 3)
- 4. Re-install the air box lid and tighten the screws.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

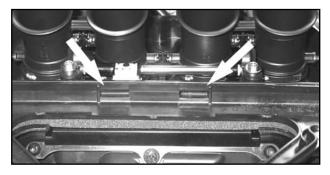


Fig. 1

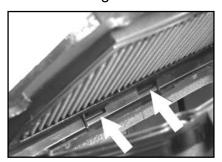


Fig. 2



Fig. 3