

Congratulations, you have purchased the finest <u>air filter</u> that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure

the K&N Air Filter seals properly.

INSTALLATION:

- 1. Remove the stock air filter.
- 2. Carefully clean the inside of the air box.
- 3. Apply a thin layer of the provided K&N Sealing Grease to the air filter sealing surface. (Fig. 1)
- Install the K&N Air Filter into the air box making sure it is completely seated.
 NOTE: The edge of the K&N Air Filter will be flush with the side of the air box. (Fig. 2)
- Reinstall the air box lid and tighten screws.
 NOTE: The "fingers" in the air box lid push on the K&N Air Filter to complete the seal.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

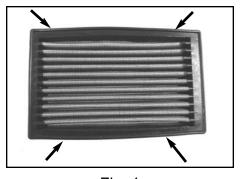


Fig. 1



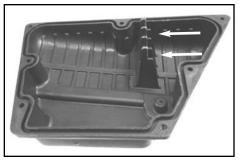


Fig. 3

Fig. 2