

Congratulations, you have purchased the finest <u>air filter</u> that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N Filter seals properly.

INSTALLATION

- 1. Remove stock air filter.
- 2. Carefully clean all of the sealing surfaces of the air box.
- 3. Apply a small amount of the provided K&N Sealing Grease to the sealing surface of the air filter. (Fig. 1)
- 4. Install the K&N Filter into the air box. The filter will only fit in the air box in one direction. (Fig. 2)

 NOTE: Make sure that the filter is pushed down into the air box completely, and that the lip seal is seated properly against air box. (Fig. 3)
- 5. Reinstall the air box cover and tighten the screws.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

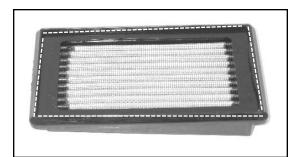


Fig. 1

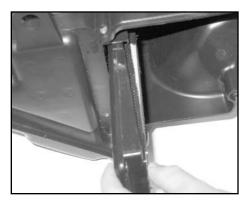


Fig. 2

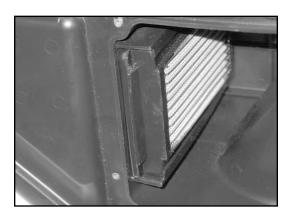


Fig. 3