



INSTALLATION INSTRUCTIONS

Part Number: DU-8015

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

INSTALLATION:

1. Remove the stock air filter from the air box.
2. Clean all the sealing surfaces in the air box.
3. Position the K&N® Air Filter on the air box lid as shown on figure 1 with the arrows on the filter base pointing up as shown on figure 2.
4. Slide the top of the K&N® Filter into the lid retention feature and press the filter base down into the lid sealing wall. Fig 3, Fig 4 **NOTE: The lids sealing wall must sit in the filters channel completely.**

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

Fig 1

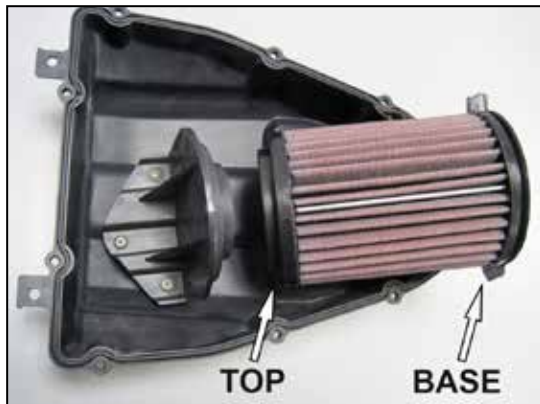


Fig 2



Fig 3



Fig 4



CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.