

INSTRUCTION



• Thanks for purchasing our cylinder head thermometer. Before operating this unit, please read carefully the instruction sheet and reatin it for future reference.

▲ Notice

- 1. This meter works on DC 12 volts applications only.
- 2. For proper installation, please follow the steps in the instruction sheet. Any damages caused by wrong installation shall be imputed to the users.
- 3.Don't break or modify the wire terminals. To avoid short circuit, do not pull out the wires out of the terminal when installing 4.Do not disassemble or change any parts.
- 5. Opening the instrument will void any warranty. Maintenance or should be executed by our professionals.

PRESS THE BUTTON ONCE PRESS THE BUTTON 3 SECONDS

OMARK MEANING:

 
NOTE Some procedures must be followed to avoid damages to the instrument.				
▲ WARNING! Some procedures must be followed to avoid damages to the instrument.				
CAUTION! Some procedures must be followed to avoid damages to the vehicle.				

1-1 Accessories






4	4 Signal Adapter wire X1 (Signal wire may be different depending on the bike model)				
Ū		 If the meter comes with a signal wire, follow the wire installation procedure. If the meter comes without a signal wire, contact your local motorcycle dealer and purchase the proper wire to fit your bike model. 			



NOTE Please contact ypur local distributor if the items received in the box are not the same as the one listed above.

2 Wiring installation instruction

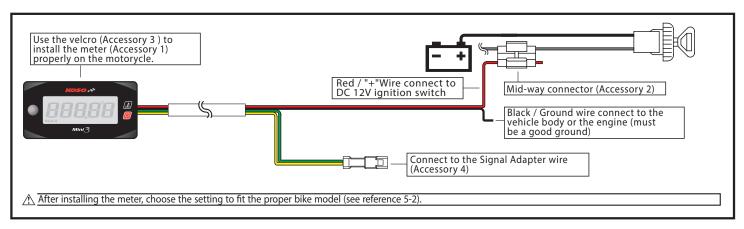


3 Basic function instruction

	Temperature & Max. temperature record	Display range: t-120~200°C (-4~392°F) t-240~185°C (-40~365°F) t-320~220°C (-4~428°F) t-420~200°C (-4~392°F) t-520~120°C (-4~248°F) Display unit: 0.1°C (°F)
1 11.5	Temperature type	Display unit: t-1~t-5
↓ 11:5	Effective voltage	DC 12V
	Effective temperature range	-10~60°C (14~140°F)
	Meter standard	JIS D 0203 S2
	Meter size (W X L X H)	W60 X L30 X H11.5 mm
	Meter weight	Around 22g

NOTE Design and specifications are subject to change without notice.

4 Basic function instruction

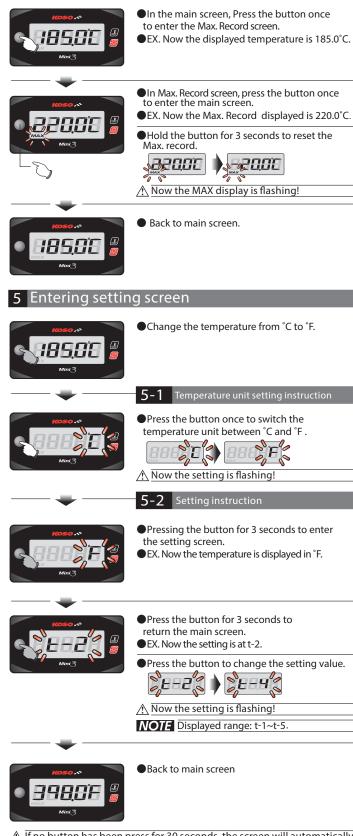

6 Model Category reference

YAMAHA	GTR	t - 1	HONDA
	BWS	t - 1	
	CUXI	t - 1	
	CYGNUS	t - 1	
	S-MAX	t - 5	
SYM	RX 110	t - 2	
КҮМСО	RACING 150	t - 3	
	VJR	t - 3	
	Quannon 150	t - 4	

7 Trouble shooting

The following points do not necessarily indicate malfunction of the meter. Please check the follwings before taking it in for repair or maintenance.

SH-mode

PCS 150

LEAD 125

MSX

Dio110

GROM

ZOOMER-X

PCX 125 (esp)

t - 2

t - 2

t - 2

t - 2

t - 2

t - 2

t - 2

t - 2

Trouble	Check item
The meter doesn't power ON.	 ●The power is not supply correctly to the meter. →Make sure the wires are connected properly. Check if he wiring and fuse are not broken.
Temp dose not appear or appear incorrectly.	●Please check the sensor. →Is the wires or temperature sensor broken?

% If the problems still can't be solve, please contact your local distributor to get assistance.


▲ If no button has been press for 30 seconds, the screen will automatically return to the main screen.

Accessories



NOTE Please contact your local distributor if the items received in the box are not the same as the one listed above.

2 Wiring installation instruction

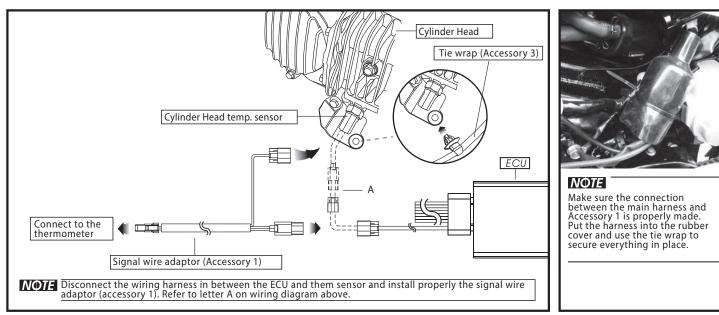

3

Tie wrap installation