KURYAKYN

INSTALLATION INSTRUCTIONS

ORBIT VISION 4 1/2" L.E.D. PASSING LAMPS

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
A CAUTION	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.
NOTICE	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

2 Passing Lamps

YOU WILL ALSO NEED:

Phillips screw driver, wire stripper, electrical and masking tape, butt electrical connectors (for non-H-D)

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- **STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- ▲ WARNING A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.
 - **STEP 2** Refer to PIC 2. Unfasten, disconnect, and remove existing 4-1/2" Passing Lamps from motorcycle. Set mounting hardware and parts aside, they will be reused.

Note: Take note of the order of how the parts were removed. Installation of the new lights will be in the reverse order of how the existing lights were installed.

STEP 3 Locate provided Passing Lamps.

FOR H-D MOTORCYCLE:

Refer to PIC 3. Remove the connected plug-in, with the red and black open ended wire, from the Passing Lamps' plug-in and discard it.

FOR NON-H-D MOTORCYCLES:

Refer to PIC 4. Keep the connected plug-in, with the red and black open ended wire, attached to the Passing Lamps' plug-in.



KURYAKYN

INSTALLATION INSTRUCTIONS

ORBIT VISION 4 1/2" L.E.D. PASSING LAMPS

-CONTINUED-

STEP 4 Locate the mounting hardware and brackets that were removed in Step 2. Align and place OEM brackets on the backside of the light, if applicable.

Note: Refer to PIC 5. The red/white wire, on the back of the Passing Lights, is the power source wire for the halo ring part of the light. If you want the halo ring to work as a separate function, vs. constantly running with the passing lamps, the red/white wire can be cut and spliced to a different power source. Doing this will require additional tools and supplies, as well as potential modifications made to the light housing case and other areas of your bike.

STEP 5 FOR H-D MOTORCYCLE:

Refer to PIC 6. Connect the 2-blade plugs of the passing lamp passing lamp housing connector. Be sure wires correspond with the housing connectors (red to positive, black to ground).

FOR NON-H-D MOTORCYCLES:

Splice the red (positive) and black (ground) wires of the connector plug, with positive and ground wires of the passing lamp housing wires.

- **STEP 6** Refer to PIC 7 through 9. Fasten the passing lamp to the passing lamp housing case in the reverse order that it was removed in Step 2, using the OEM parts and hardware that were removed in Step 2.
- **STEP 7** Reinstall main fuse, turn ignition on, and test light. Turn ignition off after testing.

WARNING VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY. ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE.

NOTICE IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



2466

KURYAKYN

INSTALLATION INSTRUCTIONS

ORBIT VISION 4 1/2" L.E.D. PASSING LAMPS

-CONTINUED-

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- 1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- 2. The product must be properly installed, maintained & operated under normal conditions.
- 3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
- 4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- 5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
- 6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.