



KINETIC SHIFT PEG

4304

PARTS INCLUDED

- 1 Kinetic Shift Peg with Hex Head Cap Screw and Internal Tooth Lockwasher
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.
CAUTION	This indication alerts you to the fact that ignoring the contents described herein can result in potential injury.

NOTICE IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Channel Lock Pliers or Large Pliers, Set of Combination Wrenches, Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

 
STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.


NOTICE Avoid damage to the motorcycle. Protect painted and chrome surfaces with a soft cloth or blanket.

-cont.-

STEP 2 Remove the existing shift peg. Use a large pliers or channel lock pliers to grab the stock peg; turn the peg counter-clockwise to remove. PIC 1 On newer models, remove the button socket screw from the center of the shift peg. PIC 2

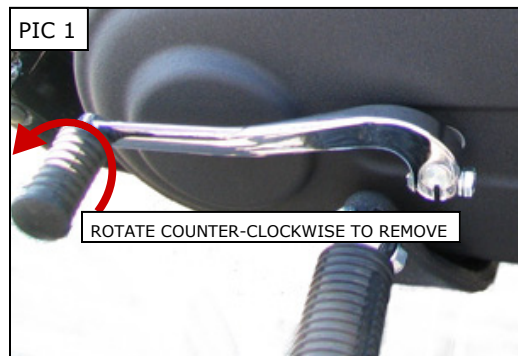

 
STEP 3 Remove the 5/16" hex head cap screw and internal tooth lock washer from the Kinetic Shift Peg. Thread the 5/16" hex head cap screw into the shift lever from the back side (PIC 3) until it is all the way through the threaded portion of the lever and spins freely. PIC 4 The smooth portion of the hex head cap screw will fit inside the threads in the shift lever.

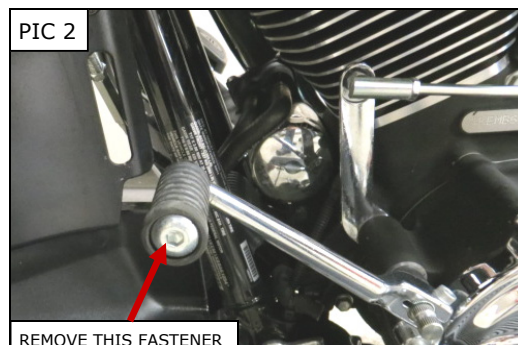

STEP 4 Place the internal tooth lockwasher over the threads of the hex head cap screw. Thread the Kinetic Shift Peg onto the 5/16" hex head cap screw as shown in PIC 5

STEP 5 Adjust the position of the Kinetic Shift Peg for comfort and then tighten the 5/16" hex head cap screw securely.

 CAUTION Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

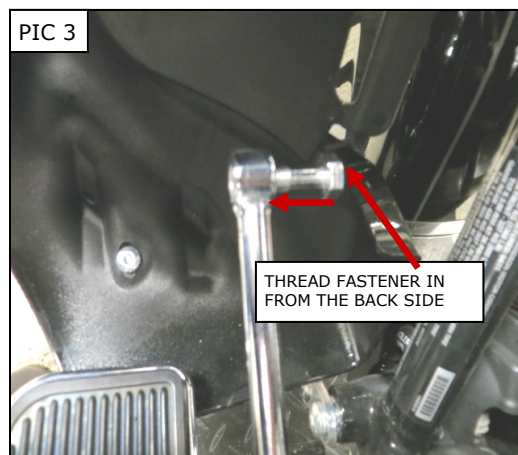

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

