

INSTALLATION INSTRUCTIONS

FAIRING LOWER DOOR POCKET

5208

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 2 Fairing Lower Door Pocket

YOU WILL ALSO NEED:

Plastic blade or flat head screw driver

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

STEP 2 Refer to PIC 1 and 2. Locate one (1) of the provided Lower Door Pockets.

STEP 3 Refer to PIC 3 and 4. Remove door from fairing lower.

Note: If using a flat head screw driver for the removal of the fairing lower door, wrap it in masking tape before using it to prevent damage to the motorcycle and its parts.

STEP 4 Refer to PIC 5. Place the removed door into the backside of the Fairing Lower Door Pocket, leading with the bottom edge of the door first. Slide the two (2) bottom plastic bosses through the bottom button holes of the pocket.

STEP 5 Refer to PIC 6. Gently pull the top of the pocket up and over the top portion of the fairing lower door. Insert the top plastic boss of the door through the top button hole of the pocket. Adjust the pocket so that it is fully wrapped around the door's edges. Fasten the straps together.

PIC 1



FRONT

PIC 2



BACK

PIC 3



LEFT (CLUTCH) SIDE

PIC 4



PIC 5



PIC 6



INSTALLATION INSTRUCTIONS

FAIRING LOWER DOOR POCKET

5208

-CONTINUED-

STEP 6 Refer to PIC 7. Align the plastic bosses of the fairing lower door over the mounting holes of the fairing lower. Press the door and pocket assembly into place.

STEP 7 Repeat steps 2 through 6 for the opposite side.

CAUTION KURYAKYN IS NOT RESPONSIBLE FOR IMPROPER LOADS OR UNSAFE POSITIONING OF THE FAIRING LOWER DOOR POCKET. BE SURE THE WEIGHT OF THE CONTENTS IN THE POCKET DOES NOT EXCEED SAFE LIMITS. IT IS THE RIDERS RESPONSIBILITY TO DETERMINE WHAT THE SAFE LIMIT IS BASED ON PROPER SECURING OF THE BAG AND WEIGHT LIMITS CALLED OUT BY THE MANUFACTURER OF THE MOTORCYCLE.

NOTICE IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



PIC 7



FINAL