

INSTALLATION INSTRUCTIONS

BATWING FAIRING POUCH BAG

5261

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

MARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

A CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1 Fairing Pouch Bag

- 1 Hardware Kit. containing:
 - 1 1/4-20 X 2-1/4" Button Socket Cap Screw
 - 1 1/4" Flat Washer

YOU WILL ALSO NEED:

Hex wrench set, torque wrench set

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- STEP 1
- Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- STEP 2
- Refer to PIC 1. Loosen the three screws that are fastened to the outer fairing and windshield. Remove the middle screw from windshield and set aside; it will not be reused.

STEP 3

Refer to PIC 2. Locate provided screw and washer. Place washer on the screw and insert it into the middle hole of the outer fairing and windshield. Loosely fasten screw.







INSTALLATION INSTRUCTIONS

BATWING FAIRING POUCH BAG

5261

-CONTINUED-

STEP 4

Refer to PIC 3 and 4. Locate Fairing Pouch Bag. With the flat edge of the pouch facing the windshield, align the notches of the fairing pouch with the screws of the windshield. Slide the pouch between the inner fairing and windshield. Press the pouch all the way down until the notches are on top of the screws.

Note: If the fit between the inner fairing and windshield is too tight, you can loosen the screws on the lower inner fairing to provide a little more room. Another option would be to remove the hardware and windshield, place the pouch, and then reinstall the windshield and hardware; refer to service manaul for assistance.

STEP 5

Be sure the gasket between the inner and outer fairings are properly aligned. Fully tighten the three windshield screws to 25-30 in-lbs (2.8-3.4 Nm).

Note: Be sure to fully tighten any hardware that may have been loosened during installation.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



