

## INSTALLATION INSTRUCTIONS

### LID ORGANIZER FOR H-D TOUR-PAK®

5838

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- |   |   |   |                        |
|---|---|---|------------------------|
| 1 | Lid Organizer                                   | 4 | Adhesive Hook Strips C |
| 2 | Snap Tab B (for Kuryakyn luggage racks only)    |   |                        |
| 2 | Snap Tab F (for OEM and Kuryakyn luggage racks) |   |                        |

#### YOU WILL ALSO NEED:


Standard hex wrench, blue loctite, warm soapy water and a clean rag

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**NOTICE** THE RECOMMENDED LOAD CAPACITY IS 2.5 POUNDS. KURYAKYN IS NOT RESPONSIBLE FOR ANY DAMAGE, LOSS, OR INJURY CAUSED BY EXCEEDING THE RECOMMENDED LOAD CAPACITY.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

**STEP 2** Refer to PIC 2 and 3, or 4 and 5. Locate provided Snap Tab B and F. **ONE AT A TIME** remove a trunk lid screw and washer. Apply a small amount of blue loctite to the threads of the screw. Fasten a snap tab to the inside of the lid using the hardware that was removed. Repeat process until all snap tabs have been installed. Fully tighten hardware.

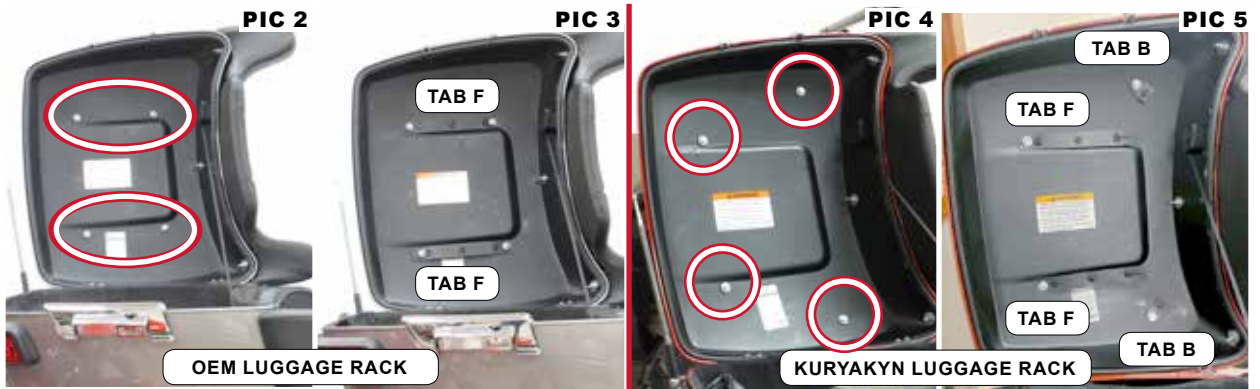

## INSTALLATION INSTRUCTIONS

### LID ORGANIZER FOR H-D TOUR-PAK®

5838

-CONTINUED-

- STEP 3** Refer to PIC 6. Locate provided lid organizer. Test the lid organizer to installed snap tabs. Remove lid organizer after snap tab application completed.

**PIC 6**

#### NOTICE

ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.

DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).

- STEP 4** Open trunk lid. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the installation area with the included alcohol pads to remove any wax or polish; allow the area to dry completely.
- STEP 5** Place the provided adhesive backed hook and loop strips onto the hook and loop strips on the back of the Trunk Lid Organizer.
- STEP 6** Use your fingernail to rub the adhesive backing; this will activate the adhesive. Remove and discard the backing from the attached hook and loop strips.
- STEP 7** Snap the lid organizer into the trunk lid. Press and rub the locations with the adhesive strips to secure them to the lid. Rub the hook and loop strips attached to the lid to ensure that they are secured to the lid. Full bonding strength will occur in 24 hours. DO NOT remove the lid organizer until the hook and loop strips have had the full curing time.

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

