KURYAKYN

INSTALLATION INSTRUCTIONS

PRECISION STARTER COVER

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
A CAUTION	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.
NOTICE	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

1 Starter Cover

- 1 Hardware Kit, containing:
 - 2 5/16"-18 X 1.75" Socket Head Cap Screw
 - 2 5/16" Flat Washer

YOU WILL ALSO NEED:

Ball end hex bit sockets set, socket wrench extension set, ft-lbs (Nm) torque wrench

NOTICE	THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION OF ITS IMPORTANCE FOR FUTURE USE.	
A WARNING	A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.	CLUTCH DE TRONT OF
WARNING	ACCIDENTAL VEHICLE START-UP COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.	840
STEP 1	Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool. Remove main fuse.	BRAKE BINE OF BRAKE (RIGHT) SIDE
STEP 2	Refer to PIC 2. Remove two (2) existing mounting screws from the starter; set them aside they will NOT be reused.	BRAKE (RIGHT) SIDE
	Note: Use a ball end hex bit socket and a socket wrench extension piece to access the starter mounting screws. Use masking or painters tape to wrap the the extension piece and ball end hex bit to prevent damage to the starter cover.	
STEP 3	Refer to PIC 3. Locate the provided Starter Cover. Align and place the cover over the top of the starter.	
STEP 4	Refer to PIC 4. Locate two (2) 5/16"-18 X 1.75" Socket Head Cap Screws and two (2) 5/16" Flat Washers. Thread the washers on to the screws, and fasten the Starter Cover to the top of the starter. Fully tighten hardware.	PIC 3
	TORQUE VALUE FOR STARTER COVER SCREWS: 22-24 FT-LBS (29.8-32.5 NM)	





INSTALLATION INSTRUCTIONS

PRECISION STARTER COVER

-CONTINUED-

STEP 5 Reinstall the main fuse.

NOTICE IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



6416