

## INSTALLATION INSTRUCTIONS

### PRECISION TRANSMISSION SHROUD, GLOSS BLACK

6442

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- |   |                     |   |                                       |
|---|---------------------|---|---------------------------------------|
| 1 | Transmission Shroud | 1 | Hardware Kit, containing:             |
|   |                     | 2 | 1/4"-20 X 1.5" Socket Head Cap Screws |
|   |                     | 2 | 1/4" Flat Washers                     |

#### YOU WILL ALSO NEED:

Set of hex wrenches, set of hex bit sockets, in-lbs (Nm) torque wrench

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

**NOTICE** THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**WARNING** A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

*Note: Check the placement of the worm drive clamp on the upper portion of the exhaust heat shield. If the fastener is positioned towards the transmission bearing house loosen the clamp and reposition it so the fastener is positioned away from it. TIGHTEN TO 20-40 IN-LBS (2.3-4.5 NM). Refer to your motorcycle's service manual for assistance.*

**STEP 2** Refer to PIC 2. Remove the two (2) existing screws on each side of the clutch release cover; set them aside they will NOT be reused.

**STEP 3** Refer to PIC 3 and 4. Locate the provided Transmission Shroud. Align and place the shroud over the transmission bearing house.



PIC 1



PIC 2



PIC 3



PIC 4

## INSTALLATION INSTRUCTIONS

### PRECISION TRANSMISSION SHROUD, GLOSS BLACK

6442

-CONTINUED-

- STEP 4** Refer to PIC 5. Locate two (2) provided Socket Head Cap Screws. Thread the washers onto the screws. Fasten the Transmission Shroud to the clutch release cover. Fully tighten hardware.

**TORQUE VALUE FOR CLUTCH RELEASE COVER SCREWS:**  
132-156 IN-LBS (14.9-17.6 NM)

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



PIC 5