

INSTALLATION INSTRUCTIONS

DRIVER BACKREST FOR GOLD WING

6772

PIC 3

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

▲ WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

A CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Backrest
- 1 Bracket
- 1 Seat Hole Plug

- 1 Hardware Kit, containing:
 - 4 1/4-20 X 5/8" Socket Head Cap Screws
 - 4 1/4-20 x 1/4" T-Nut
 - 1 Spring Plunger
 - 1 Thumb Screw

YOU WILL ALSO NEED:

Hex wrench set, flat blade screw driver, painters masking tape, loctite

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- **STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- Remove side covers and unfasten the seat. Disconnect the seat's electrical harness from the motorcycle. Remove the existing seat. Place it on a flat clean surface.

Note: See motorcycle's service manual for additional assistance.

- **STEP 3** On the bottom side of the seat, unfasten and remove existing seat hole plug. Set it aside, it will **NOT** be reused.
- STEP 4 Located provided Bracket, four (4) T-Nuts, and four (4) Socket Head Cap Screws. Apply a small amount of loctite to each of the screws.
- Refer to PIC 2. Carefully align and slide the four (4) T-Nuts over the mounting holes located around the opening of the seat hole. Be sure the T-nuts are flat side down. Place a small amount of tape over an edge of the aligned T-Nuts to hold them in place. Do not cover the mounting holes of the T-Nuts.
- STEP 6 Refer to PIC 3. Align the mounting plate of the bracket with the T-Nuts. Insert the bracket through the seat hole and press down on it firmly. The bracket will be a tight fit.
- STEP 7 Refer to PIC 4. Secure the bracket in place using the provided four (4) Socket Head Cap Screw. Fully tighten hardware. Be careful not to let the T-Nuts rotate as you tighten the screws.







INSTALLATION INSTRUCTIONS

DRIVER BACKREST FOR GOLD WING

6772

-CONTINUED-

Reconnect the seat's electrical harness to the motorcycle and reinstall the seat. Reinstall the side covers once the seat is fully installed.

Refer to PIC 5. Locate provided Spring Plunger. From the top side of the seat, press back and down on the hole located in between the drive and passenger seat to gain easy access to the bracket. Insert and fasten the Spring Plunger into the mounting hole of the Bracket.

Note: Over tightening of the Spring Plunger will cause difficulty with moving the seat up and down.

STEP 10 Located provided Backrest and test first it into the Bracket. Adjust the Spring Plunger as needed.

STEP 11 Refer to PIC 6. Locate provided Seat Hole Plug. Set it into the seat, covering the backrest Bracket.

Refer to PIC 7. Locate provided Backrest. Insert the Backrest through the Seat Plug and into the Bracket. The Backrest should click into place once inserted into the Bracket. Adjust the height of the Backrest by pushing it down or pulling it up.

STEP 13 Refer to PIC 8. Locate provided Thumb Screw and apply a small amount of loctite to it. On the backside of the Backrest insert the Thumb Screw into the mounting hole.

STEP 14 Adjust the angle of the Backrest by tightening or loosening the Thumb Screw.

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.











PAGE 2

NOTICE