

INSTALLATION INSTRUCTIONS

DRIVER FLOORBOARD SPACERS FOR FL SOFTAIL, GLOSS BLACK

7508

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|--------------------|---|--------------------------------------|
| 1 | Left Front Spacer | 1 | Hardware kit, containing: |
| 1 | Left Rear Spacer | 4 | 3/8-16 X 2.5" Socket Head Cap Screws |
| 1 | Right Front Spacer | | |
| 1 | Right Rear Spacer | | |

YOU WILL ALSO NEED:

Torx wrench set, hex bit set, ft-lbs (Nm) torque wrench

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

*Note: Take note of the stampings made on the back side of the spacers.
LF = Left Front and LR = Left Rear (clutch side)
RF = Right Front and RR = Right Rear (brake side)*

STEP 2 Refer to PIC 2 and 3. On the right (brake) side, unfasten the existing driver floorboard mounts and remove the whole assembly. Set floorboard and mount assembly aside, they will be reused.

STEP 3 Refer to PIC 4 and 5. Locate provided Right Rear Spacer, Right Front Spacer, two (2) screws, and the existing driver floorboard assembly. On the inside edge of the floorboard mount align and place the rear spacer on the rear mount leg and the front spacer on the front mount leg. The letter stampings on the spacers should be readable from on top of the mount legs.



INSTALLATION INSTRUCTIONS

DRIVER FLOORBOARD SPACERS FOR FL SOFTTAIL, GLOSS BLACK

7508

-CONTINUED-

STEP 4 From the outside edge of the floorboard mount, insert a screw through each of the mounting holes and spacers to keep them in place.

STEP 5 Refer to PIC 6. Align the driver floorboard mount, with the screws and spacers attached, with the mounting holes on the bikes. Insert and fasten the screws to the bike frame. Fully tighten hardware.

STEP 6 Refer to PIC 7. On the left (clutch) side, unfasten the existing driver floorboard mounts and remove the whole assembly. Set floorboard and mount assembly aside, they will be reused.

Note: For ease of installation unfasten the shift lever from the floorboard assembly. If you leave it attached you will need to hold the assembly up during the installation process.

STEP 7 Locate provided Left Rear Spacer, Left Front Spacer, two (2) screws, and the existing driver floorboard assembly. On the inside edge of the floorboard mount align and place the rear spacer on the rear mount leg and the front spacer on the front mount leg. The letter stampings on the spacers should be readable from on top of the mount legs. The boss located on the Left Rear Spacer should align with the bike frame mounts.

STEP 8 From the outside edge of the floorboard mount, insert a screw through each of the mounting holes to hold the spacers in place.

STEP 9 Refer to PIC 8 and 9. Align the driver floorboard mount, with the screws and spacers attached, with the mounting holes on the bikes. Insert and fasten the screws to the bike frame. Fully tighten hardware.

STEP 10 Fully tighten all hardware and both sides.

TORQUE VALUE FOR FLOORBOARD MOUNT SCREWS:
40-45 FT-LBS (54.2-61NM)

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

