



**CYLINDER BASE COVER**

**8393**

**FOR SOFTAILS**

**FITS: ALL '07-UP SOFTAIL MODELS**

**PARTS INCLUDED**

- 1 Cylinder Base Cover
- 1 Hardware Kit
  - 1 Hot Spot
  - 1 5/16-18 x 3-1/4" Socket Head Cap Screw
  - 1 5/16-18 x 4" Socket Head Cap Screw
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

**THANK YOU FOR CHOOSING KÜRYAKYN!**

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**TOOLS SUGGESTED**

Set of Hex Wrenches, Combination Wrenches, Torque Wrench

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**PROCEDURE**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

**STEP 2** Remove the nylon insert nut on the front of the shift linkage; disconnect the front end of the shift linkage from the shifter lever. Secure the shift linkage up and out of the way during the rest of the installation.

**STEP 3** Remove the stock fastener on the left side of the crankcase as shown in PIC.1.

**STEP 4** Position the Cylinder Base Cover for Softail in place and secure it with the included Socket Head Cap Screw - 96" and 103" engines use the 3-1/4" long screw, 110" engines use the 4" long screw . Torque the fastener to 15-19 ft. lbs.

**STEP 5** Push the Hot Spot into the head of the new fastener.


**STEP 6** Reconnect the shift linkage and shift lever; tighten the nut.

**STEP 7** Check for proper clearance before operating the motorcycle.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

**Küryakyn**<sup>®</sup>

PIC. 1

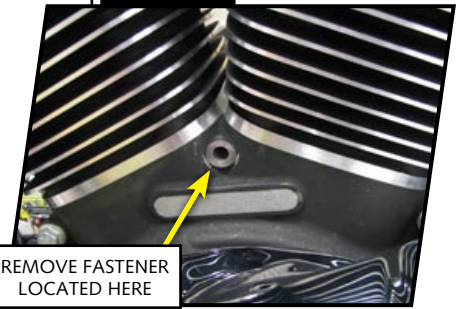

REMOVE FASTENER  
LOCATED HERE

**PAGE**  
**2**

**INSTALLATION**