


Parts List
for:

544649

Pump Assembly

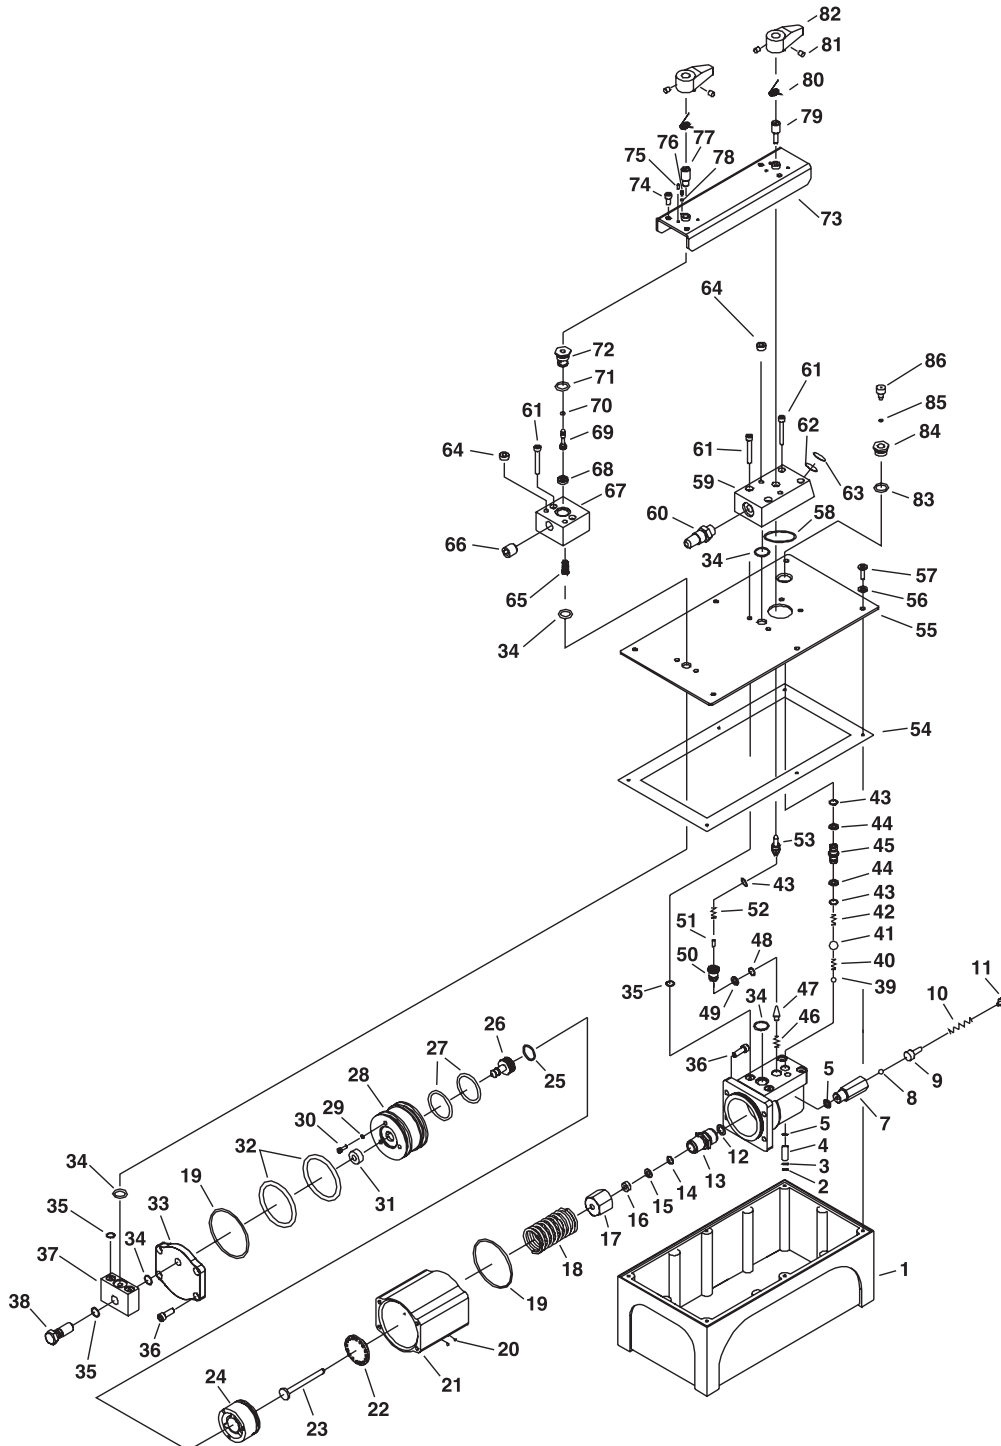

Parts List

552976 Reservoir Seal

Item No.	No. Req'd	Description
54	1	Reservoir Seal

552978 Reservoir

Item No.	No. Req'd	Description
1	1	Oil Reservoir
54	1	Reservoir Seal
56	6	Copper Washer
57	6	Screw

552977 Rebuild Kit

Item No.	No. Req'd	Description
2	1	Snap Ring
3	1	Oil Filter
4	1	Pipe
5	2	Copper Washer
34	5	O-ring
35	7	O-ring
39	1	Steel Ball
40	1	Spring
41	1	Steel Ball
42	1	Spring
43	3	O-ring
44	2	Nylon Gasket
45	1	Fitting
46	1	Spring
47	1	Cone Valve
48	1	O-ring
49	1	Nylon Gasket
50	1	Release Valve
51	1	Rod
52	1	Spring
53	1	Release Rod
54	1	Reservoir Seal
55	1	Cover
58	1	O-ring
60	1	Muffler
61	6	Screw
64	4	Washer
68	1	Seal
70	1	O-ring
71	1	O-ring
85	1	O-ring

552979 Air Pump

Item No.	No. Req'd	Description
12	1	Copper Washer
13	1	Pump Cylinder
14	1	Y-seal
15	1	Nylon Gasket
16	1	Bushing
17	1	Nut
18	1	Spring
19	2	O-ring
20	4	Steel Ball
21	1	Air Pump Housing
22	1	Washer
23	1	Pump Plunger
24	1	Air Piston Body A
25	1	O-ring
26	1	Air Shuttle Valve
27	2	O-ring
28	1	Air Piston Body B
29	3	O-ring
30	3	Screw
31	1	Shuttle Valve Seal
32	2	O-ring
33	1	Rear Cover
34	2	O-ring
35	2	O-ring
36	8	Screw
37	1	Fixing Base
38	1	Screw

552980 Air Inlet Assembly

Item No.	No. Req'd	Description
34	1	O-ring
61	2	Screw
64	2	Washer
65	1	Spring
66	1	Fitting
67	1	Air Valve Block
68	1	Seal
69	1	Valve Rod
70	1	O-ring
71	1	O-ring
72	1	Coupler

552981 Lever/Cover Kit

Item No.	No. Req'd	Description
73	1	Mounting Plate
74	4	Screw
75	2	Screw
76	2	Screw
77	1	Screw
78	2	Lockwasher
79	1	Screw
80	2	Spring
81	4	Screw
82	2	Lever

552982 Reservoir Vent Plug

Item No.	No. Req'd	Description
83	1	Seal
84	1	Vent
85	1	O-ring
86	1	Screw

552983 Safety Valve

Item No.	No. Req'd	Description
5	1	Copper Washer
7	1	Safety Valve
8	1	Steel Ball
9	1	Ball Seat
10	1	Spring
11	1	Screw