

Assembly instructions

Adhesive Weights

1. Preliminary work



Ensure that the weight, rim and ambience temperatures are at least 16 °C. Clean the wheel rims with a suitable cleaning agent to avoid grease and silicone residue on the rim (e.g. isopropanol 70%).

2. Adjustment of the adhesive weight to the rim shape



Adjust the adhesive weight to the rim radius with the protective film. The radius of the weight body and the rim must be at least in parallel to each other. It is even better if the radius of the weight body is less than that of the rim.

3. Removal of the protective film



Remove the protective film from the adhesive tape after adjusting the weight to the rim radius. Do not touch the adhesive tape before attaching it to the wheel!

4. Weight installation



Now press the weight against the rim from the centre towards the outer edge. The pressure should be at least 100 kpa.