Sentinel Armor

Installation Instructions for Part No. 34477

Hardware Included:

Tools Required:

- 4 Short plastic bolts
- 4 Long plastic bolts
- 8 Plastic nuts

Screwdriver 11mm or 7/16" wrench

PLEASE READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

For Sentinel Handguards only!

Note: If you have mirrors with your Sentinel handguards, leave the mirror mounted to the handguard and mount the Armor as instructed. The Armor will slightly restrict your view. If you prefer you can trim a portion of the Armor away for full use of your mirrors.

- **STEP 1:** Remove your handguards if they are already mounted and remove the vent covers.
- **STEP 2:** Holes need to be drilled in the handguards to mount the Sentinel Armor. Use the Armor as a template to mark the location of the holes. Place the Armor inside the handguard, the handguard mounting tabs go through the cutout in the Armor (see photo 1).
- STEP 3: Insert two of the supplied short bolts into the vent cover holes going through both the guard and Armor. Use two of the supplied nuts to secure. (see photo 2) Be careful to not over tighten the nuts or they could strip out the bolts.
- STEP 4: Flip the guard and Armor over. There are two holes that need to be drilled. Push the Armor into the guard and mark each hole. Drill a 1/8" pilot hole and then a ¼" hole (see photo 3).
- STEP 5: Insert the longer bolts from the front of the guard through the Armor and attach the nuts. Be careful to not over tighten the nuts or they could strip out the bolts.
- **STEP 6:** Replace the snap-in vent cover.
- **STEP 7:** Repeat steps 1-6 for the other side.





Photo1



Photo 2

