

QUICK START GUIDE

Charging the Battery:

Charge the battery overnight before your first use.

- Green: Full charge
- Flashing green: 90% Charge
- Orange: Low charge
- Red: Battery low, recharge as soon as possible

If the battery is completely depleted the headset will still function for 2-way communications. Only the bass speakers will stop working.

Caution:

- Always use a 2 Amp or higher USB charger.
- Do not allow the battery to completely discharge. Doing so will cause excessive recharge times.

To use:

- Set overall volume with the upper knob, then turn bass speaker/amplifier on using the lower knob to set bass level.
- For optimum performance, the microphone should be touching your lips at all times.

