


MAGICMOUNT™ SUCTION CUP MOUNT LOW PROFILE

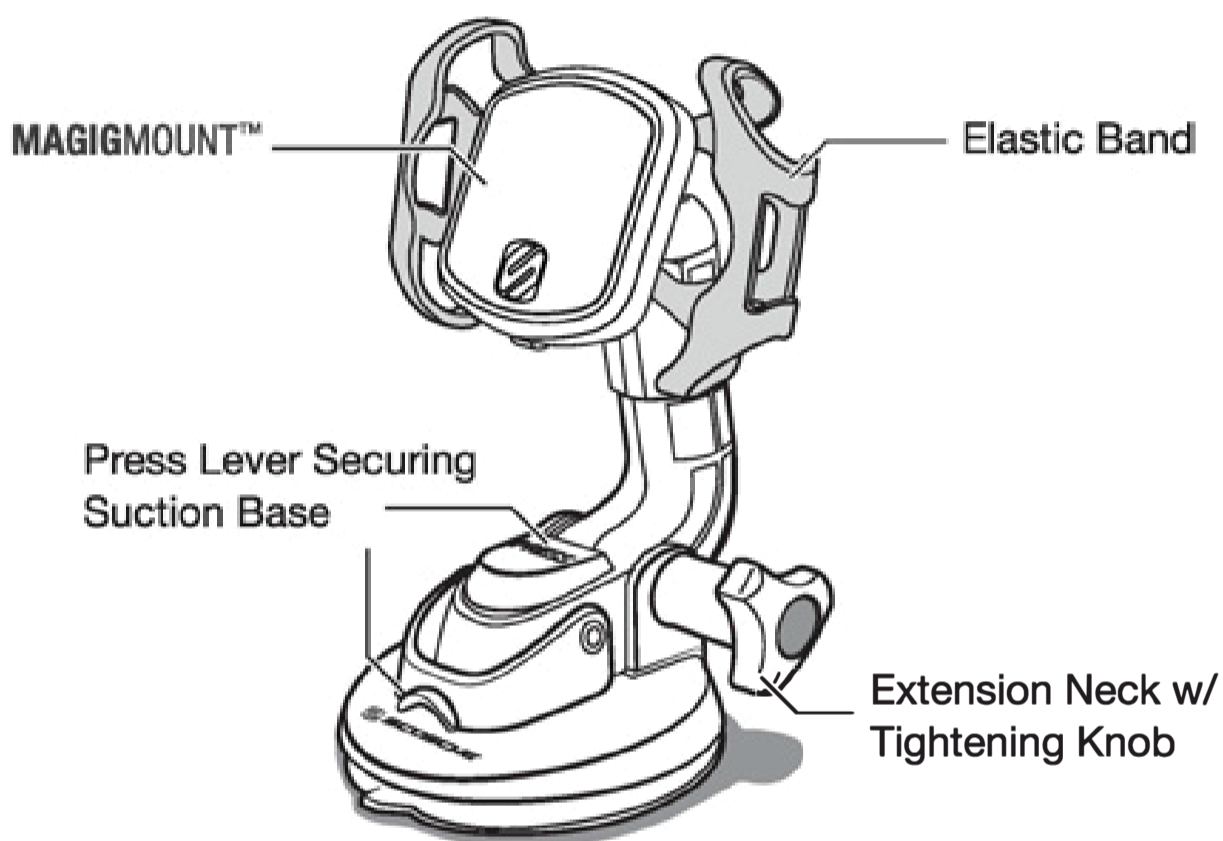

CONTENT

PARTS INCLUDED

1. (1) Elastic Band
2. (1) **MAGICMOUNT™** w/ Mounting Plates
3. (1) Cleaning Wipe
4. (1) Ball Joint Attachment Adapter w/ Tightening Knob
5. (1) Press Lever Securing Suction Base
6. (1) Extension Neck w/ Tightening Knob

MOUNTING THE MAGICPLATE™


OPTION 1 (small or large plate)

Attach adhesive side of metal plate directly to back of device



OPTION 2 (small or large plate)


Attach adhesive side of metal plate directly to back of case

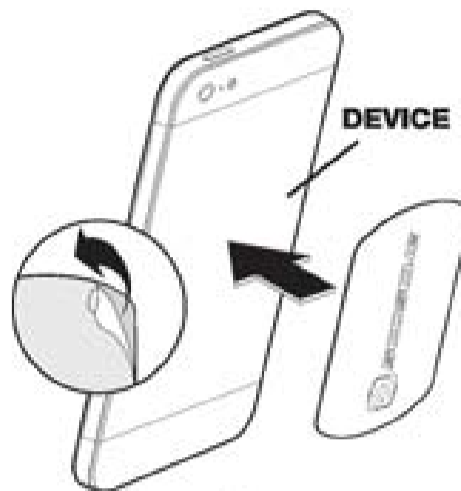


OPTION 3 (large plate only)

Attach adhesive side of metal plate to interior of case, between device and inside of case. Plate will adhere to magnetic mount through rear panel of case.

NOTE: If you choose not to attach the metal plate to the device or case please leave the adhesive backing in place. Position the plate between the device and interior of case with the metal surface facing the case.

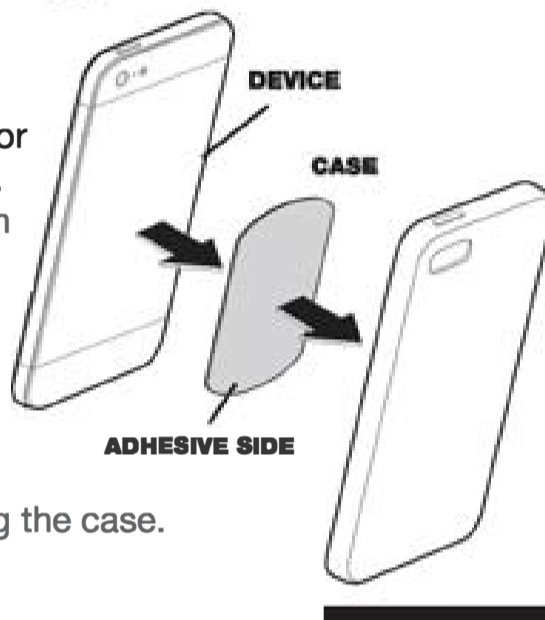

MAGICPLATE™ PLACEMENT

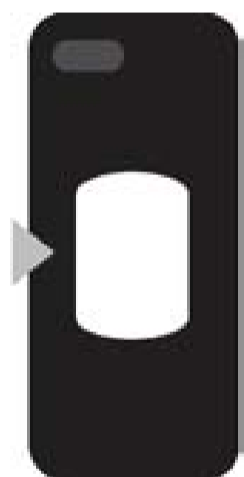

For Typical Smartphones




For Wireless Charging
Qi-enabled Smartphones

REMOVING THE MAGICPLATE™



Use a thin plastic card to carefully lift the plate's adhesive surface from the mounting surface. Slowly lift up and remove the plate.

MAGICMOUNT™ ASSEMBLY

Insert the **MAGICMOUNT™** pivot ball through the center of the elastic band (**A**), see assembled example illustration on right.

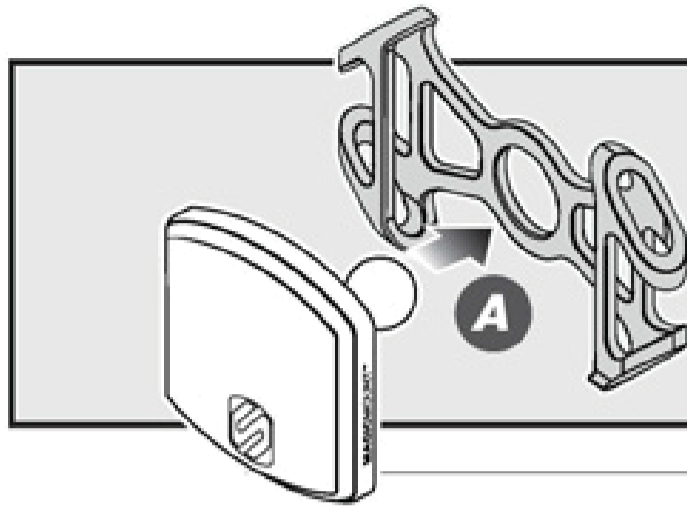


Secure the elastic band using the securing hook located on the backside of the **MAGICMOUNT™** (**B**), see illustration on right.

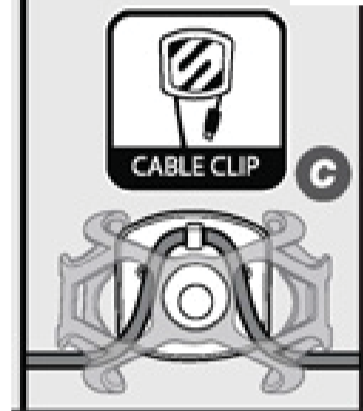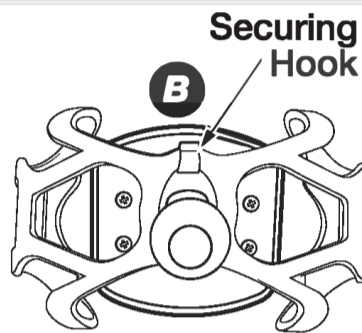

Note: Securing hook can also be used as a cable clip when elastic band is not being used (**C**).


Elastic Band: With the metal plate positioned onto the device, align the elastic band with your device and attach to the corners of your device as shown on the right (**D**). The elastic band will secure your device while riding.

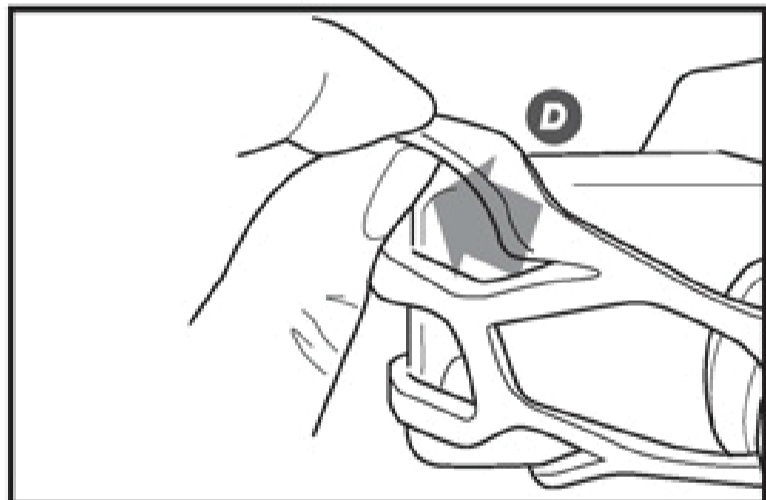

NOTE: Elastic band can be attached horizontally or vertically.

MAGICMOUNT™ Adjustment

Loosen knob (**E**) to reposition or attach the **MAGICMOUNT™** up to 360° (**F, G**). Once attached and the position is set, tighten the knob (**E**) to secure the positioning **MAGICMOUNT™**.

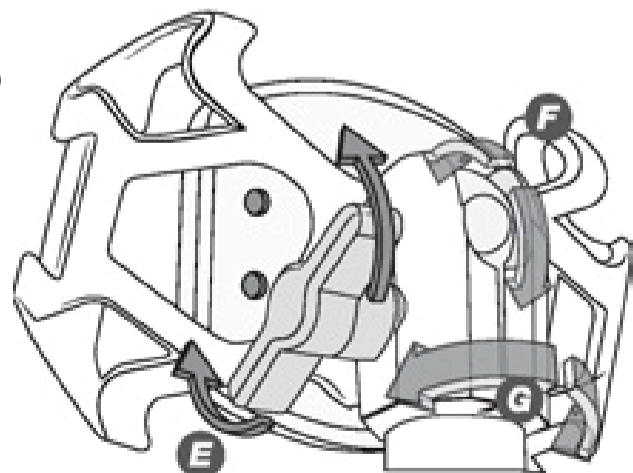


NOTE: When loosened the angle of the **MAGICMOUNT™** is capable of 360° rotation for positioning.

ADJUSTING EXTENSION NECK

ADJUSTING EXTENSION NECK

Adjusting the tilt angle of the neck.

1. Turn the lower knob to loosen the extension neck (H). Once loose, position the extension to your preferred position.
2. Tighten the lower knob (H) to secure the desired location into place.

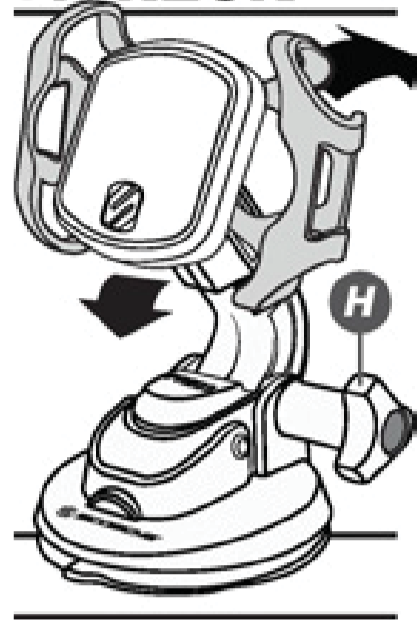


MOUNTING

MOUNTING THE SUCTION MOUNT


- 1 Clean mounting location thoroughly of debris and dust for the best adhesion (I).



- 2 Apply the suction to the mounting location and make sure the lever is to the up position, as shown in the illustration (J).

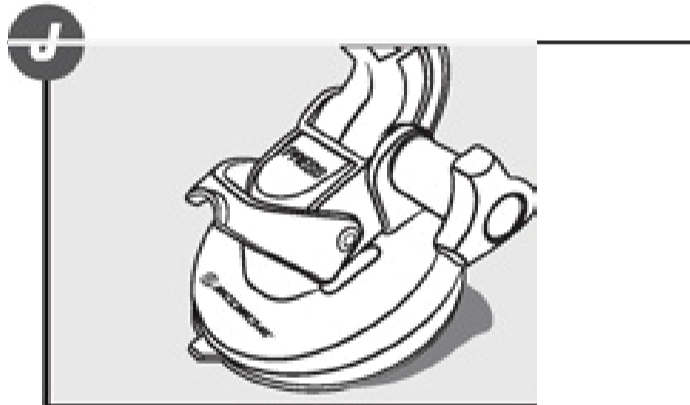

- 3 Firmly apply pressure to the button labeled **PRESS** to create a vacuum to the suction (K).

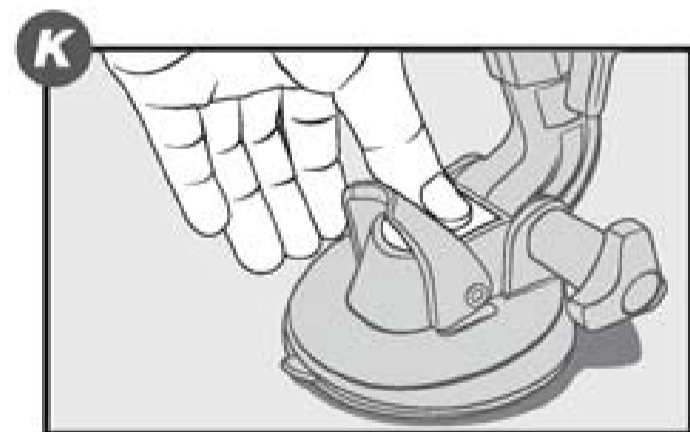

- 4 Set the lever to the bottom position (L) to secure the suction and the mount to the designated mounting location.

