

FITTING PLATE







PIN SYSTEM INSTALLATION


















x4

2.5 N·m

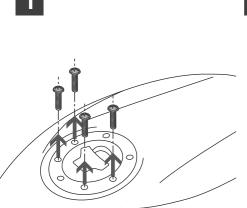

 

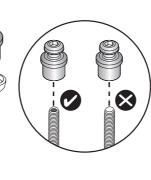


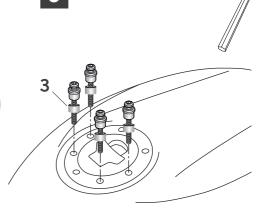


PLATE INSTALLATION

 


Tank Bag











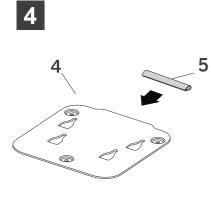 



E16P

 

E10P



(B) Check your bag's manual before the installation of the fitting plate.

Always use the security strap.