



## X0SE04P Tank Bag E-04P

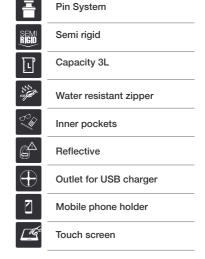

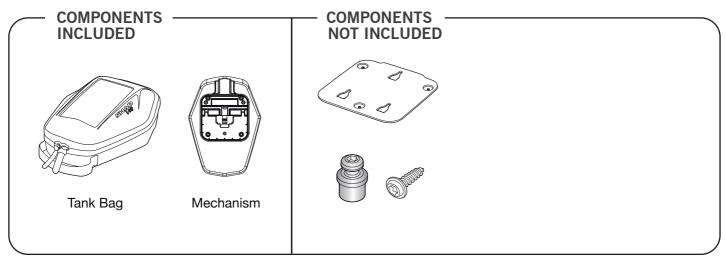

## **A WARNING**

Make sure the bag and its accessories are properly assembled.

To clean the bag use a damp cloth with neutral soap. Never use solvents or chemical products.

Prolonged exposure to the elements might discolor fabrics and wear away plastic components.


Waterproof zippers and rain covers do not guarantee that the bag is totally waterproof.

Use zippers with care. To open the bags slide zip all the way without forcing.


Maximum load: 1,5 Kg.

Maximum speed: 120 km/h or 74 mph.

SHAD will not hold responsibility for damages caused by an incorrect assembly or use.

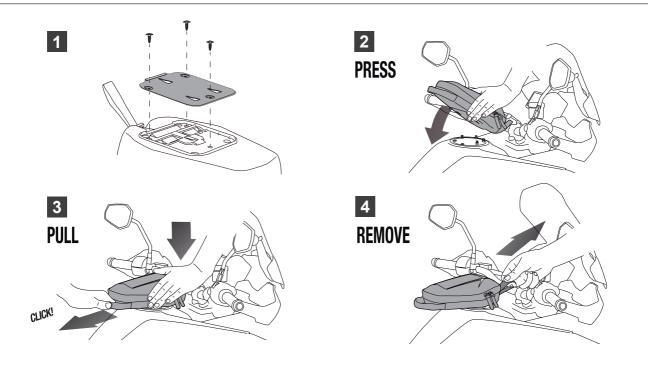

## **OTHER FEATURES**

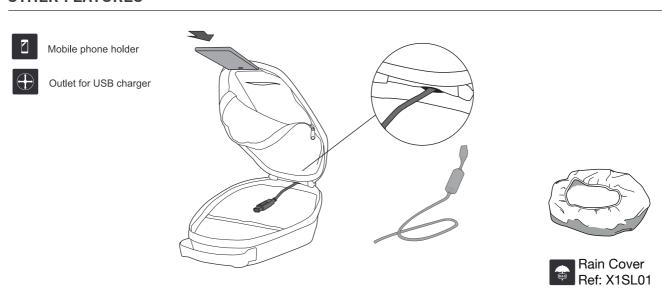

## MORE PRODUCTS FROM SHAD

