A WARNING

Make sure the bag and its accessories are properly assembled. Always use hook and loop fastener and safety belts.

To clean the bag use a damp cloth with neutral soap. Never use solvents or chemical products.

Prolonged exposure to the elements might discolor fabrics and wear away plastic components.


Rain covers do not guarantee that the bag is totally waterproof.

Use zippers with care. To open the bags slide zip all the way without forcing.


Maximum load: 2 Kg. per bag


Maximum speed: 120 km/h or 74 mph.


SHAD will not hold responsibility for damages caused by an incorrect assembly or misuse of the product.

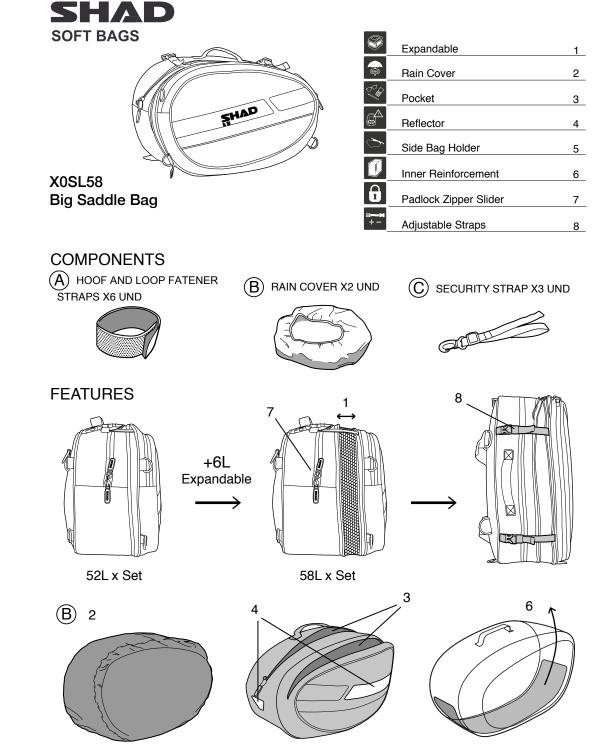

MOTO FIXATION WITH SIDE BAG HOLDER

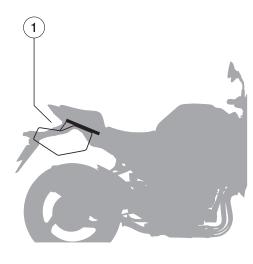


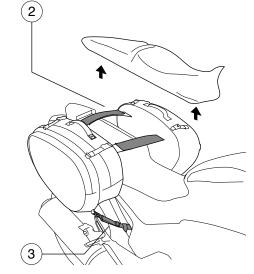


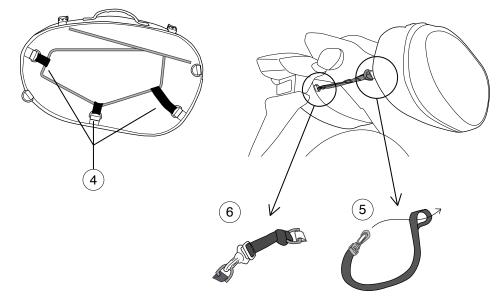


Side Bag Holder - Chek compatibility with your motorbike at www.shad.es

MOTO FIXATION WITHOUT SIDE BAG HOLDER

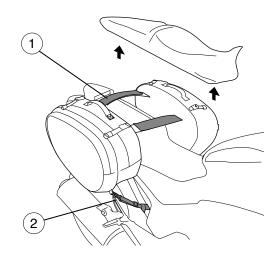

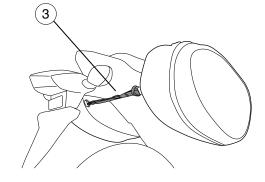

ACCESSORIES NOT INCLUDED - SOLD SEPARATELY

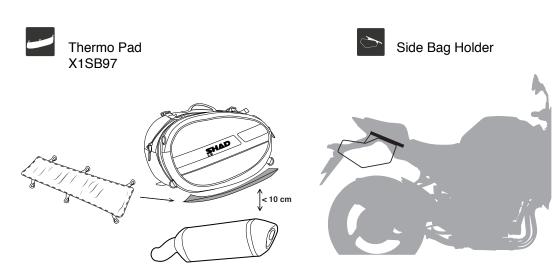

FEATURES

