SPARTAN CARBON - SPARTAN

OWNER'S MANUAL



WARNING

ACarefully read, understand and follow the instructions provided in this manual, and keep it in a safe place for future reference. If you have any doubt whatsoever regarding the use or care of your helmet, please see your retailer for assistance or advice. Failure to follow the warnings and instructions provided herein can result in the failure of the <u>helmet to protect you</u> in an accident, resulting in a head injury or death.



Anatomy of the helmet	3
• A helmet in your size	4
• Chin strap	7
• Visor	9
Sun shield	
• Textile parts	11
• Cleaning	13
Nose mask/Chin cover	14
• Easy Fit	14
Ventilations	15

Thank you for purchasing this SHARK SPARTAN helmet.

We are certain that you will be completely satisfied with this helmet.

Meeting the most rigorous international safety standards, however this helmet cannot protect the user in every circumstance, it is so recommended to drive carefully.

Your helmet has been designed for a motorcycle use only and not for any other purpose.

This SHARK SPARTAN helmet is approved and meets the ECE R 22/05 standards, so it meets the demands imposed in every country recognizing this regulation on its own territory. **WARNING!** The United-States have a specific regulation, the helmets ECE approved only cannot be used in these territories without the complementary DOT FMVSS 218 approval.

WARNING! For French traffic, the Highway Code requires safety reflectors (supplied separately in a packet) to be fitted in accordance with the enclosed plan.

ANATOMY OF THE HELMET



1) Visor VZ 160

- 2) Sun shield
- 3) Sun shield mechanism button
- 4) Upper ventilation
- 5) Lower ventilation
- 6) Chin strap buckle:
- 6a) Double-D ring
- 6b) "Précise Lock"
- 7) Low trim
- 8) Visor seal
- 9) Retractable chin cover



6b - "Precise Lock" chinstrap buckle

A HELMET IN YOUR SIZE

WARNING! No helmet can protect the wearer from all foreseeable high or low speed impacts. However, for maximum protection, the helmet must be of proper fit and the chin strap must be securely fastened as described in this manual. Failure to have a proper fit and to securely fasten the chin strap is dangerous, as the helmet could come off in an accident, resulting in severe head injury or death.

CHOOSE YOUR SIZE

Each helmet is designed to correspond to a head measurement (from for XS up to XL). To measure your head size, wrap a tape measure horizontally around your head at a height of approximately one inch (2.5cm) above your eyebrows. If your head measurement falls between two sizes, first try on the smaller helmet. However, because of different head shapes, this size reference can only be considered as a guide. For maximum protection, it is necessary to check that the helmet is well suited for the shape of your head. When trying a brand new helmet, make sure that your head is pushed into the helmet as far as possible, with the front part just above your eyebrows, and with the chin strap securely fastened as described on the next page.

1. The helmet should feel very snug all around your head and fairly tight on the cheek pads. If not, it is too big for you; select a smaller size.

See figure A.

2. With the chin strap properly fastened (see instructions), be sure that the helmet cannot be moved excessively from side to side or up and down. You should feel the skin of your head and face being pulled as you move the helmet. If not, the helmet is too big for you; select a smaller size. See figure B.





A HELMET IN YOUR SIZE

3. Grasp the back of the helmet at the base and attempt to pull the helmet off your head. Next, push the helmet upwards from beneath the chin guard. You should push and pull with relatively significant force. If the helmet starts to come off, the helmet is too big for you; select a smaller size.

4. Bend your head forward as far as possible. The chin guard must not touch your chest. See figure C.

5. Bend your head backwards as far as possible. The helmet shell must not touch your back. See figure D.

Never wrap your hair inside the helmet, or place anything in or on your hair inside the helmet. Never insert padding to modify the position of the helmet on the head.

If you have any questions about properly sizing your helmet, see your retailer for assistance. Each of these tests must be repeated throughout the life of the helmet, as the comfort padding may wear or change over time. If, during the life of your helmet, your helmet does not maintain the correct fit, you must replace the helmet.

WARNING! Never lend your helmet to others without insuring a proper fit in accordance with these instructions.

WARNING! If you cannot obtain a proper fit in accordance with these instructions, DO NOT USE THE HELMET. Select a different helmet size or model.

Sizing (cm)





XS	53/54
S	55/56
М	57/58
L	59/60
XL	61/62
XXL	63/64



1/ PUTTING ON THE HELMET

To put on the helmet, lower the chin cover, take hold of the two sections by the buckles and hold them slightly apart to facilitate the passage of your head (chin strap released).

While carrying out this movement, you are advised to keep the two sections of the chin strap apart with your thumbs so that they are properly positioned.

Position the protective parts of the chin strap buckle correctly and fasten it in accordance with the recommendations that are appropriate to the versions and country (see page 7-8).

Check that the tension and therefore the positioning of the helmet are correct for all positions.

2/ REMOVING THE HELMET

Unhook the chin strap, lower the chin cover and hold the two sections slightly apart as for putting the helmet on and remove the helmet.

3/ AERODYNAMICS AND ACOUSTICS

The SPARTAN has been carefully designed to offer you the greatest pleasure in use.

The profile of the helmet, its impermeability and the quality of the materials used enable air noise on the crown of the head and aerodynamic turbulence to be filtered as far as possible. In order for the use of your helmet to be as pleasant as possible, it is important for turbulence or air eddies created by the fairings not to impair the aerodynamic qualities of your SPARTAN and/or your size should not cause air eddies to reach the lower part of your helmet.

CHIN STRAP

CHIN STRAP

Depending on the various versions and the country concerned, your SHARK SPARTAN helmet is equipped with a chin strap with a "Precise Lock" rapid buckle with a snap lock or one with a double-D ring. Proper use of the chin strap is critical for proper performance of the helmet. Never alter your chin strap in any way. For example, never cut it or add holes, or apply buttons, studs or other items to your chin strap. During the life of your helmet, be sure that the chin strap never suffers any type of abrasion or cut, and that its total length does not change. If it does, replace your helmet.

PRECISE LOCK

The "Precise Lock" snap lock system gives you precise and accurate adjustment because of the considerable length of its notched section.

However, it is essential on purchase to adapt the length of the chin strap to your measurements. Adjust the length of the strap using the adjusting buckle (Figs. A, B, C and D). Choose your SHARK SPARTAN helmet and attach the holding system. When the "Precise Lock" is adjusted to the medium position, the chin strap must be correctly tensioned under the chin to hold the helmet firmly without causing you any discomfort or pain.

To fasten the chin strap, all you have to do is to thread the tongue into its place on the buckle until tension is perfect (Fig. E). The tongue connects and is automatically blocked.

To release the chin strap, you have to pull on the lever (Fig. F) and remove the tongue from the buckle. Although the notched tongue enables you to change the adjustment precisely on each use, it is important to check frequently that the adjustment of the strap length is correct.

WARNING! Never ride with the chin strap loose or insufficiently tightened. Even though the interior padding gives you the impression of being held, your helmet risks coming off in a fall. Never apply lubricating or acid products or grease or solvents to the chin strap buckle parts.



CHIN STRAP





WARNING! Never use the strap loop to secure your helmet to your head. In order to be properly fastened, you must thread the strap through the double-D-rings. Failure to properly use the double-D-rings will cause your helmet to become dislodged during an accident, leaving your head completely unprotected and resulting in severe head injury or death. Try to pull down on the chin strap with your fingers. If the strap loosens in any way, you have not properly tightened

DOUBLE-D RING

A - Slide the long part of the chin strap through the two D rings, positioning the comfort pad correctly between the chin strap and your neck.

B - Then bring the end of the chin strap back through the lower of the two D rings as shown in the diagram.

the chin strap with the double-D rings.

Repeat the steps above. Never ride with the chin strap loose, improperly fastened or improperly positioned. Even though the comfort padding gives you the impression that the helmet is securely held in place, it will come off in an accident, leaving your head completely unprotected.

If you have any doubt concerning the fastening system of your helmet, do not use the helmet. Contact your dealer for assistance.

C - Pull the strap until you feel resistance from the strap and it is held in place under your chin without being too tight, so that you have no difficulty in breathing.

D - Slide the free end of the chin strap into the plastic strap loop on the comfort padding, in order to prevent the strap from fluttering in the wind.



AUTO SEAL - SUN VISOR





QRVS System



DISMANTLING.

Raise visor in the upper position (A).

Exerting a traction on the side of the visor (B).

Repeat the operation on the other side.

This visor has a system of easy disassembly without tools, allowing you to clean it easily.

ASSEMBLY.

Place the visor face to the helmet.

Place the visor hooks in the side flanges (C).

Exerting a homogeneous pression on both sides (D).

WARNING! If you are not sure that you properly replaced the visor, do not use the helmet. The visor could suddenly and without warning become detached from the helmet while riding, causing you to lose control of your motorcycle, resulting in an accident, personal injury, or death.Contact your retailer for any assistance or advice. Do not ride with an open visor and do not try to open or adjust the visor while riding. The visor could suddenly and without warning become detached from the helmet, leaving your eyes and face unprotected. In addition, your head could be pulled to the side, causing you to lose control of your motorcycle. These events could cause you to lose control of your motorcycle, resulting in an accident, personal injury or death.

WARNING! Tinted or dark visors should never be used at night or under poor visibility conditions as they reduce your ability to see. Never ride with a fogged visor.

WARNING! If your visor no longer provides you with clear visibility after a period of service, you must immediately replace it. Never ride if your visor is scratched, dirty, foggy or with your vision obscured in any way. Always ride with perfect visibility.

AUTO SEAL

Your helmet SPARTAN has a patented system SHARK "AUTO-SEAL". This system ensures a perfect sealing of the visor by clinging the visor on the seal, by spring effect backward the visor when it is in lower position

SUN VISOR

WARNING! Do not try to raise lower or adjust your sun shield while riding. You could lose control of your motorcycle, resulting in a accident, personal injury or death. Even if the manipulation of the sunshield is easy, never operate while riding.

The sun shield is operated using the button in the upper ventilation. When the sun shield is lowered, the button is in a forward position; to raise it, move the button toward the back. To ensure its protection and lengthen its lifespan, the external surface of the SPARTAN sun shield has been given an anti-scratch treatment. To maintain and clean it, please follow the same instructions as for the external surface of the visor.

WARNING! If your visor and/or sun shield no longer provide you with excellent visibility after a period of service, it is absolutely essential for you to replace them. We advise you always to ride with perfect visibility. Never use sunshield as unique protection, without the main visor. You must always ride with visor down as described in previous section.

REMOVAL

- Place the sun visor in its low position.
- Move the sun visor as indicated by the arrow to release the hook (Fig. A).
- Gently pull the sun visor downward (Fig. B).
- Detach the sun visor by the side (Fig. C).

REPLACEMENT

Carry out the above operation in reverse order:

- Move the handling button to the low position;
- Clip the sun shield on at one side and then the other (Fig. D).
- Using a screwdriver or similar pointed instrument,

apply pressure to the central fixing button and then clip the sun shield back on by lifting it slightly (Fig. E).

WARNING! If you are not sure that you properly replaced the sun shield, do not use the helmet. The sun shield could suddenly and without warning become detached from the helmet while riding, causing you to lose control of your motorcycle, resulting in an accident, personal injury, or death. Contact your retailer for any assistance or advice. NEVER ride with the sun shield as eye protection. You must always ride with the visor in the lowered position, as described in the previous section.











TEXTILE PARTS

REMOVAL

- Turn your helmet over.

- Lower the chin cover.
- Separate the two sections of the chin strap.

- Remove the neck pad by holding one of its sides, pull out the end and then detach its rear section (Fig. A). Do the same with the second side.

- Unclip the two cheek pads (Fig. B) and slide them along the chin straps to extract them.

- Withdraw the rear part of the head section from its housing in order to remove it (Fig. C -D).

- To complete the operation, unclip the front of the head section, starting with one side (Fig. E) and remove the head section.









TEXTILE PARTS

REPLACING THE INTERIOR PADDING

- Turn your helmet over.

- Lower the chin cover.

- Reposition the cheek pads by passing the chin straps through the slit in the foam (Fig. A) and clip all the studs from the two cheek pads (Fig. B).

- Start the operation by sliding the plastic tabs of the front of the head section in its housing beginning with one side (Fig. C).

- Reinsert the plastic tabs from the front of the neck pad into their place (Fig. D).

- To complete the operation, unclip the front of the head section, starting with one side (Fig. C) and remove the head section.

- Unclip the two cheek pads (Fig. D) and slide them along the chin straps to extract them.

WARNING! The interior padding is critical to maintain the correct fit of the helmet on your head. If you have any doubt whatsoever regarding the removal or replacement of the interior padding, DO NOT USE YOUR HELMET. Contact your retailer for assistance or advice. NEVER use your helmet with any part of the interior padding removed. The helmet will not protect you in an accident.

WARNING! The polystyrene lining and interior padding are critical to properly fit your helmet on your head. An improper fit could cause your helmet to become dislodged in an accident, leaving your head unprotected and resulting in severe head injury or death. If you are not sure that you properly replaced the comfort padding, DO NOT USE YOUR HELMET. Contact your retailer for assistance or advise.









THE TEXTILES

The SPARTAN make it easy for you to appreciate fully the performance of your helmet.

The parts in contact with the skin are made in a fabric that is guaranteed to feel pleasant, to absorb perspiration well and to resist wear satisfactorily. We treat surfaces to limit the risk of mould and bacteria.

WARNING! Although they are selected for their quality of resistance and satisfactory wear, all the interior padding is subject to normal wear depending on use and care and maintenance, the length of use and also the degree of acidity of your perspiration. If you note any wear, we advise you to replace the interior padding in order to keep your helmet perfectly clean and comfortable. Your SHARK supplier can propose you with replacement parts and also offer you cheek pads of different thicknesses and densities, should the standard selection not correspond to the contours of your face.

CLEANING THE INTERIOR

The interior textile parts are washable; it is important to follow the instructions below scrupulously to avoid damaging them:

The cheek pads and head section must be hand washed in warm, soapy water (about 30°). Do not use aggressive detergents but either a product for delicate materials in low dilution or household soap. It is essential to dry textile and foam parts completely before using them. They must be dried at room temperature. Never iron textile parts. For parts with a leather appearance or textiles attached to safety elements, use a slightly damp sponge or cloth and household soap and rinse with clean water. Avoid allowing too much water to come into contact with polystyrene parts.

MARNING! It is essential to ensure that all interior parts are perfectly dry

before using the helmet.

CLEANING - ANTI-FOG MASK - EASY FIT - SHARKTOOTH

NOSE-MASK

Your SPARTAN is equipped with an anti-fog mask removable. Apply lateral pressure to assembly or remove.



CHIN COVER

The SHARK SPARTAN has a new exclusive system of retractable chin cover:

To use it, pull out the plug as shown to open it (Fig. A). To take away it, replace the chin cover in its initial position (Fig. B).

WARNING! Never move the chin cover while you are in motion on your motorcycle. You can lose control of your motorcycle, causing an accident, personal injury or death.



EASY FIT

Your helmet SPARTAN has been designed to provide additional comfort for eyeglasses wearers with the SHARK EASY FIT.

The 2 cheeks are made with a pocket shape fabric part to provide the passage to the glasses arms.



SHARKTOOTH

Your helmet SHARK SPARTAN is designed to be equipped with audio system SHARKTOOTH.

You will find a specific location designed for battery at the rear of the helmet, behind the neck pad (A) and a space for the microphone to the front of the helmet. Concerning the headphones, a cavity has been devise in the cheek hook and loop fastener. Battery is easily rechargeable thanks to its access from the outside without dismantling neck pad. SHARKTOOTH[®] system offers the possibility to communicate easily by Bluetooth For urban, Touring or road riders who want to communicate while they are driving. SHARTOOTH[®] Blue-tooth hands-free bike kit for mobile phones and Smart-phones is a must-have accessory.

It provides a bike to bike intercom system with another SHARKTOOTH[®] (500m). It can be easily connected with most of the mobile phones and Smartphones. It switches on by the voice, there is an automatic volume control and it enables riders to reduce background noise. It is waterproof. You can receive audio information from motorbike Bluetooth[®] GPS navigator and music streaming thanks to Stereo Bluetooth[®] A2DP. To access this function, connect the SHARKTOOTH[®] to an appropriate Bluetooth[®] device.

WARNING! SHARK disclaims all liability in case of adaptation into the SKWAL of a communication system other than the SHARKTOOTH.

VENTILATIONS

VENTILATION INSIDE THE HELMET.

The upper air intake (Fig. A) allows air to enter onto the upper part of the head and thus renew the air in the head section. The channels incorporated in the internal shock absorbers facilitate the circulation of air over the surface of the head.

The quality and design of the textile comfort parts contribute to the proper distribution of air. The position of the upper ventilation system is designed to optimise the effectiveness of its intake of air. Depending on the type of your motorbike, the fairing may reduce the effectiveness of this ventilation.

The ventilation is in the open position when the tongue is pushed backwards (1) and closed when the tongue is pushed forwards (2).

LOWER VENTILATION.

The principal function of this air intake is to direct a flow of fresh air over the interior surface of the visor in order to limit the risk of misting. The fresh air diffused cuts off contact with the hot air emitted by breathing or even by the head inside the helmet. To open (1) or close (2) the lower ventilation, press the button as indicated.

Warning! Do not open or close any vents while operating your motorcycle. You could lose control of your motorcycle, resulting in an accident, personal injury or death.

AERODYNAMICS AND ACOUSTICS

The SPARTAN has been carefully designed to offer you the greatest pleasure in use.

The profile of the helmet, its impermeability and the quality of the materials used enable air noise on the crown of the head and aerodynamic turbulence to be filtered as far as possible. In order for the use of your helmet to be as pleasant as possible, it is important for turbulence or air eddies created by the fairings not to impair the aerodynamic qualities of your SPARTAN helmet. The shape of the fairings of your motorcycle and/or your size should not cause air eddies to reach the lower part of your helmet.





