

GASKET INSTALLATION INSTRUCTIONS

Follow these simple directions.

1. Wipe oil, water, and foreign material from thermostat mounting surface on engine and thermostat housing. REMOVE WHITE BACKING PAPER ON GASKET TO EXPOSE ADHESIVE.
2. Place thermostat into engine block or water outlet housing, whichever contains the shallow recess (counterbore). NOTE: Copper pellet of thermostat must face towards the engine.
3. Place adhesive side of the gasket over the thermostat, lining up gasket with bolt holes, and press firmly so gasket holds thermostat in place while bolts are inserted and tightened.

