

## TUFF JUG RIPPER CAP ASSEMBLY



1. Place one end of the hose in the hole, inside the Ripper Cap.
2. The hose should not be showing more than 1/16 of an inch.



3. A completed assembly of Ripper Cap with hose. The Tuff Jug should be filled with race Fuel and the black vent hose will swell into position and will not come out after 24 hours.
4. While putting the cap onto the jug, feed the other end of the hose down inside the handle of the Tuff Jug. This allows for proper venting and fast pouring !



5. The Ripper Cap is self venting, do not open side vent when using a Ripper Cap.

