



# RS184 INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

## How to adjust Footpeg positions

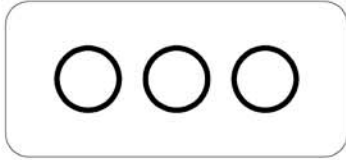

1) Decide which mounting hole in pocket to use.

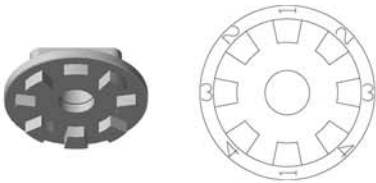


2) Position #1 at 12 o'clock position for shift and brake.  
Be sure other numbers are not upside down.




3) Tab reader will indicate which position you are on.  
**CAUTION** - Each number has two positions. Be sure to use the same position for shift and brake side.

Example



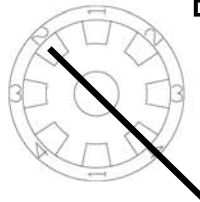


#2 position

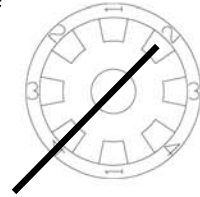

#2 position

Footpeg positions (Red Circle is OEM Footpeg position)

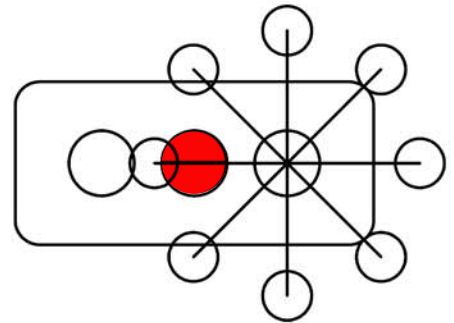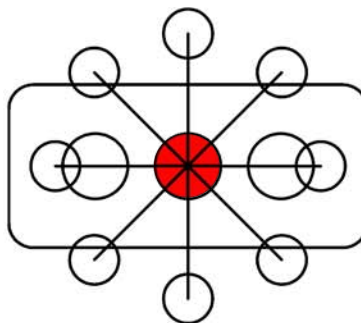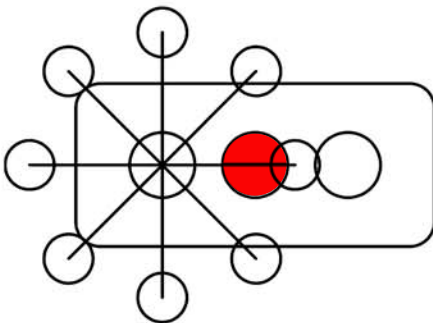

# RS184 INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY


## BRAKE SIDE EXPLODED VIEW

FOR: BMW S1000RR 15-16



### INDEX

-  Lubricate
-  Thread Lock
-  Use Factory Piece

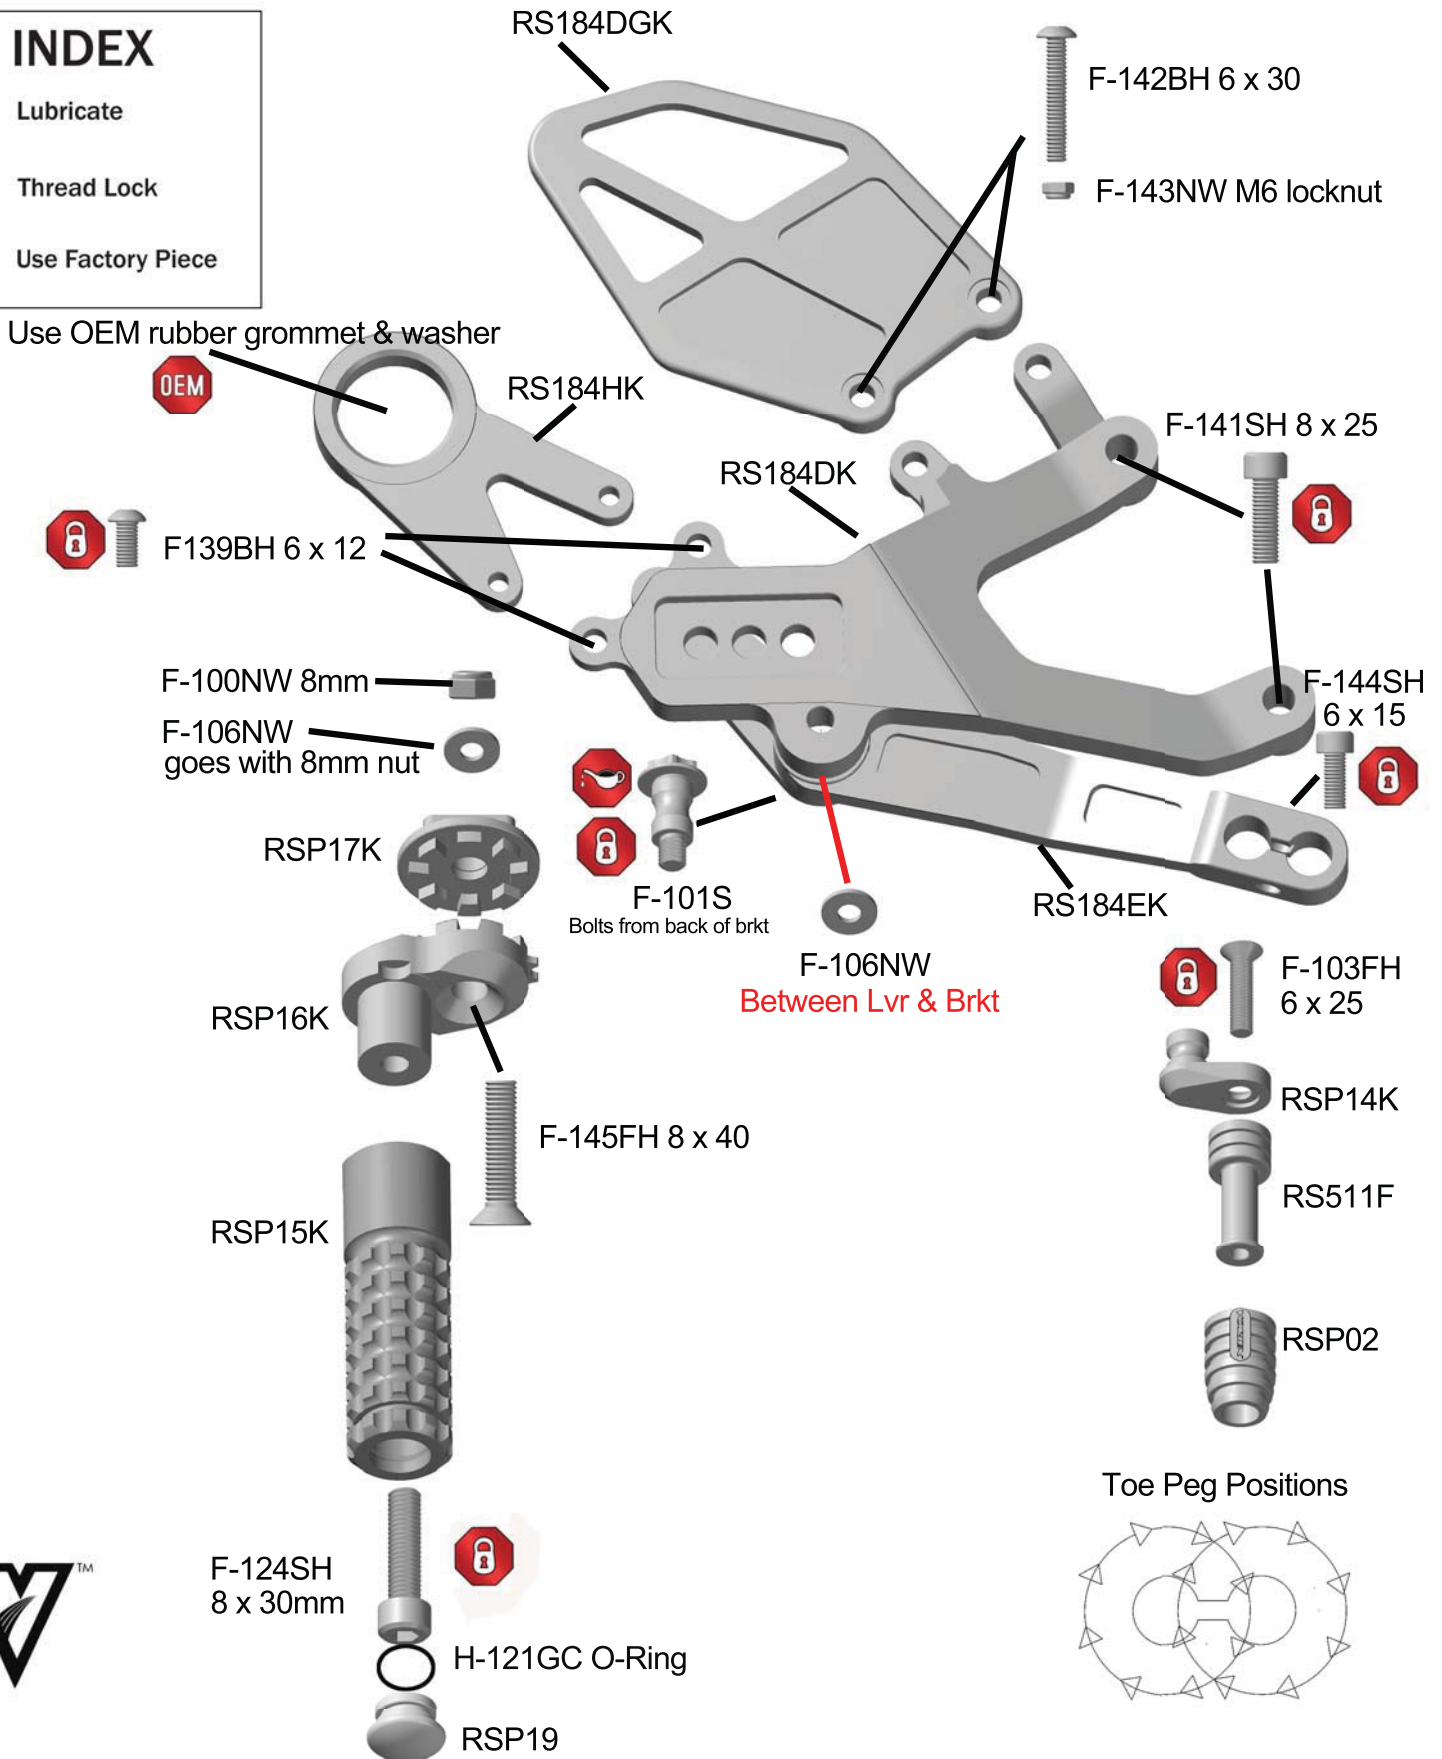

# RS184 INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

## SHIFT SIDE EXPLODED VIEW

FOR: BMW S1000RR 15-16



**INDEX**

-  Lubricate
-  Thread Lock
-  Use Factory Piece

