
B-(1 pcs.)

ACERBIS PARTS

A-(1 pcs.)

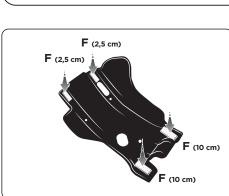

1. Cut the sponge and install it following the dimensions and positions indicated.




E-(2 pcs.)


F-(1 pcs.)

2. Remove the Silent Block.


C-(1 pcs.) **D-**(1 pcs.)

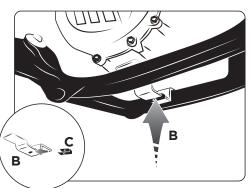


3. Assemble the clip on the clamp. Place the first clamp on the backward frame.

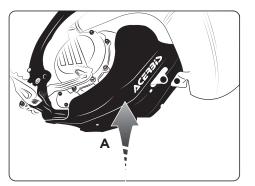


4. Place the skid plate on the frame.

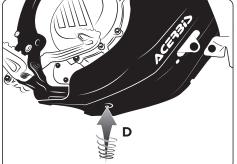

5. Fasten the clamp's screw without tighten it.

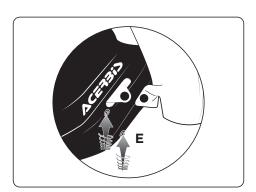

6. Fasten the 2 front screws and tighten them.

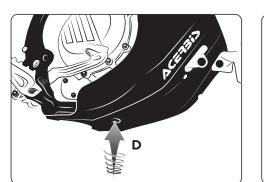

7. Tighten the clamp's screw.



8. Reassemble the Silent Block.

