



COD. 5000005608

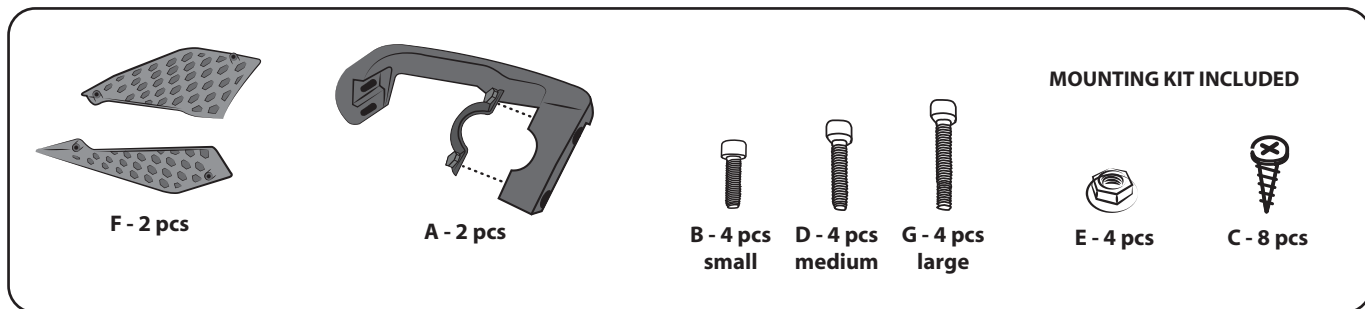


MOUNTING

1 Fasten the bracket on the handlebar.


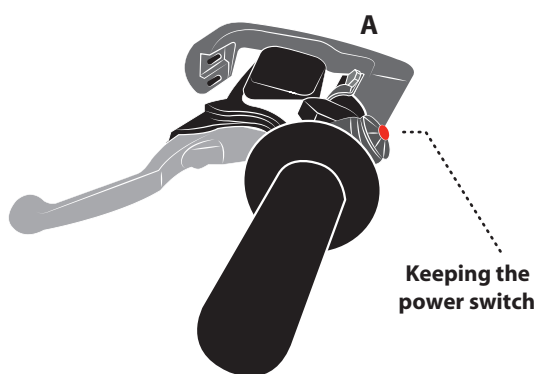


! Bracket mounting.

2 Fasten the handguard on the bracket.

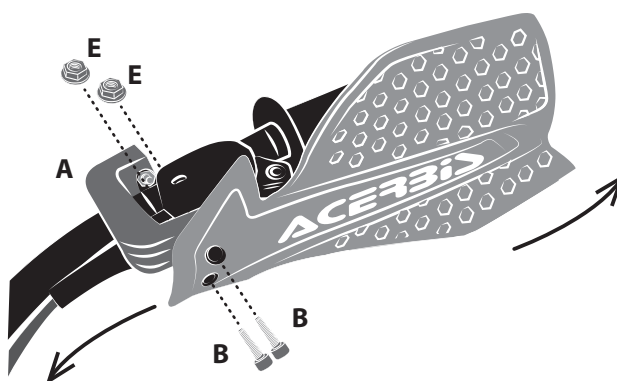

! Bracket mounting only for TWINWALL handlebar

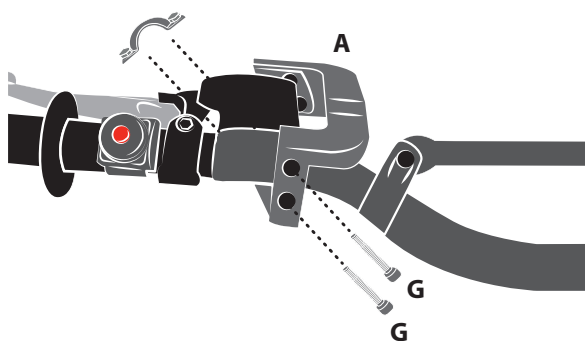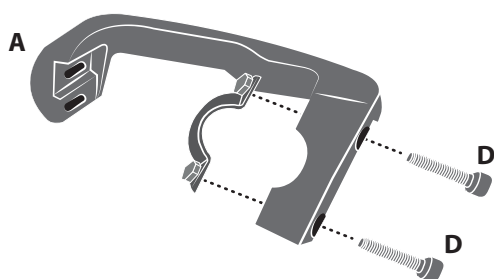

with SPOILER

